Mellanox MetroX™ Long Haul Systems Hardware User Manual Models: TX6240/TX6280

Rev 1.1

www.mellanox.com

NOTE:
THIS HARDWARE, SOFTWARE OR TEST SUITE PRODUCT ("PRODUCT(S)") AND ITS RELATED DOCUMENTATION ARE PROVIDED BY MELLANOX TECHNOLOGIES "AS-IS" WITH ALL FAULTS OF ANY KIND AND SOLELY FOR THE PURPOSE OF AIDING THE CUSTOMER IN TESTING APPLICATIONS THAT USE THE PRODUCTS IN DESIGNATED SOLUTIONS. THE CUSTOMER'S MANUFACTURING TEST ENVIRONMENT HAS NOT MET THE STANDARDS SET BY MELLANOX TECHNOLOGIES TO FULLY QUALIFY THE PRODUCT(S) AND/OR THE SYSTEM USING IT. THEREFORE, MELLANOX TECHNOLOGIES CANNOT AND DOES NOT GUARANTEE OR WARRANT THAT THE PRODUCTS WILL OPERATE WITH THE HIGHEST QUALITY. ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT ARE DISCLAIMED. IN NO EVENT SHALL MELLANOX BE LIABLE TO CUSTOMER OR ANY THIRD PARTIES FOR ANY DIRECT, INDIRECT, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING, BUT NOT LIMITED TO, PAYMENT FOR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY FROM THE USE OF THE PRODUCT(S) AND RELATED DOCUMENTATION EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Mellanox Technologies
350 Oakmead Parkway Suite 100
Sunnyvale, CA 94085
U.S.A.
www.mellanox.com
Tel: (408) 970-3400
Fax: (408) 970-3403

Mellanox Technologies, Ltd.
Hakidma 26
Ofer Industrial Park
Yokneam 2069200
Israel
www.mellanox.com
Tel: +972 (0)74 723 7200
Fax: +972 (0)4 959 3245

© Copyright 2015. Mellanox Technologies. All Rights Reserved.

Mellanox®, Mellanox logo, BridgeX®, ConnectX®, Connect-IB®, CoolBox®, CORE-Direct®, GPUDirect®, InfiniBridge®, InfiniHost®, InfiniScale®, Kotura®, Kotura logo, MetroX®, MLNX-OS®, PhyX®, ScalableHPC®, SwitchX®, TestX®, UFM®, Virtual Protocol Interconnect®, Voltaire® and Voltaire logo are registered trademarks of Mellanox Technologies, Ltd.

CyPU™, ExtendX™, FabricIT™, FPGADirect™, HPC-X™, Mellanox Care™, Mellanox CloudX™, Mellanox NEO™, Mellanox Open Ethernet™, Mellanox PeerDirect™, Mellanox Virtual Modular Switch™, MetroDX™, NVMeDirect™, StPU™, Switch-IB™, Unbreakable-Link™ are trademarks of Mellanox Technologies, Ltd.

All other trademarks are property of their respective owners.

Table of Contents

Revision History 9
About this Manual 10
Chapter 1 Introduction to Mellanox MetroX™Long Haul Systems. 11
1.1 Overview 11
1.2 Speed and Switching 11
1.3 Management Interfaces and FRUs. 12
1.4 Features 12
1.4.1 Network Management Feature 12
1.5 Certifications 12
1.6 Ordering Information. 13
Chapter 2 Installation 14
2.1 Safety Warnings. 14
2.2 Air Flow. 15
2.3 Package Contents. 17
2.4 Mounting Options 19
2.4.1 TX6240/TX6280 Mounting 19
2.4.2 MEX6200 Mounting. 24
2.5 Grounding 26
2.5.1 TX6240/TX6280 Grounding. 26
2.5.2 MEX6200 Grounding 26
2.6 Connecting the TX6240/TX6280 System to the MEX6200 Unit 27
2.7 Cable Installation. 30
2.8 Initial Power On. 31
2.8.1 TX6240/TX6280 Initial Power On 31
2.8.2 MEX6200 Initial Power On 33
2.9 System Bring-Up 33
2.9.1 Configuring Network Attributes 33
2.9.2 Remote Connection. 36
2.10 FRU Replacements 37
2.10.1 TX6240/TX6280 Power Supply and Fans 37
2.10.2 MEX6200 Power Supply and Fan. 40
Chapter 3 Interfaces 41
3.1 Data Interfaces. 41
3.1.1 RS232 (Console). 41
3.1.2 Management 41
3.1.3 USB. 42
3.1.4 I2C. 42
3.1.5 Reset Button 42
3.2 MEX6200 Interfaces 43
3.2.1 LINK Ports and Connectors 43
3.2.2 Management Ports and Connectors. 47

3.2.3 Facility Protection for MEX6200 49
3.2.4 Fiber Protection 51
3.3 LEDs 52
3.3.1 TX6240/TX6280 LED Notifications 52
3.3.2 MEX6200 LED Notifications 57
3.4 Inventory Pull-out Tab 58
Chapter 4 Software Management 59
4.1 Upgrading Software 59
Chapter 5 Troubleshooting 60
5.1 TX6240/TX6280 Troubleshooting Instructions 60
5.2 MEX6200 Troubleshooting Instructions 62
Chapter 6 Specifications 65
6.1 TX6240 System- Standalone 65
6.2 TX6280 System - Standalone 66
6.3 MEX6200 WDM Unit 67
Appendix A Accessory and Replacement Parts 68
Appendix B Thermal Threshold Definitions 69
Appendix C Interface Specifications 70
C.1 QSFP Interface 70
C.2 RJ-45 CONSOLE and I2C Interface 72
C.3 RJ45 to DB9 Harness Pinout 73
Appendix D Disassembly and Disposal 74
D.1 Disassembly Procedure 74
D.2 Disposal 74
Appendix E Safety Warnings (Multiple Languages) 75
E.1 Nordic Countries Notices 75
E.2 Installation Safety Warnings (English) 75
E.3 אזהרות בטיחות בהתקנה (עברית) 78
E.4 安装安全性警告 (Chinese) 82
E.5 Avertissements de sécurité pour l'installation (French) 85
E.6 Installation Sicherheitshinweise(German) 88
E.7 Advertencias de seguridad de instalación (Spanish) 92
E.8 Предупреждения по технике безопасности при установке (Russian) . . . 95
E.9 Avertismente privind siguranţa la instalare (Romanian) 98
E.10 Sigurnosna upozorenja za instaliranje (Croatian) 102
E.11 Avvertenze di sicurezza per l'installazione (italiano) 105
E.12 Montaj Güvenlik Uyarıları (Türkçe) 109

List of Figures

Figure 1: Long Haul TX6240/TX6280 Front Side View 11
Figure 2: Air Flow Direction Marking - Connector Side Inlet to Power Side Outlet 16
Figure 3: Air Flow Direction Marking - Power Side Inlet to Connector Side Outlet 16
Figure 4: Rack Rail Kit Parts 19
Figure 5: Screwing on the Rail 20
Figure 6: Inserting the Caged Nuts 21
Figure 7: Slide the Rail into the Rail Slide 21
Figure 8: Installing the Slides 22
Figure 9: System Placement in the Rack 23
Figure 10: Installation Completed 23
Figure 11: Rack Installation Kit 24
Figure 12: Rack Mount Brackets 24
Figure 13: Brackets Attached to the MEX6200 Unitt 25
Figure 14: Attaching the Brackets to the Rack 25
Figure 15: Installed Fiber Tray 25
Figure 16: Grounding the MEX6200 27
Figure 17: MEX6200/TX6240 Connectivity 28
Figure 18: MEX6200/TX6280 Connectivity 29
Figure 19: MetroX E2E Connectivity 29
Figure 20: Breakout or Fanout Cable 30
Figure 21: System Status LEDs 5 Minutes After Power On 32
Figure 22: Two Power Inlets - Electric Caution Notifications 32
Figure 23: Power Supply Unit Extraction 38
Figure 24: PS Unit Pulled Out 38
Figure 25: Fan Module Latches 39
Figure 26: MEX6200 Power Supply and Fan Unit 40
Figure 27: MEX6200 Front Panel 43
Figure 28: MEX6200 with 8 Unprotected Transponders 45
Figure 29: External ALARM Diagram 47
Figure 30: MEX6200 with 4 Protected Transponders 50
Figure 31: MEX6200 with Transponder Protection 51
Figure 32: Fiber Protection with Optical Switch 51
Figure 33: MEX6200 with Optical Switch 51
Figure 34: System Status LEDs - Front and Rear sides 52
Figure 35: Fan Status LED - Front and Rear sides 53
Figure 36: Power Status LED 54

Figure 37: Rear Side Panel 55
Figure 38: Port LEDs 56
Figure 39: Pull-out Tab 58
Figure 40: QSFP Connector Male and Female Views 71
Figure 41: RJ45 to DB9 Harness Pinout 73

List of Tables

Table 1: Revision History Table 9
Table 2: References 10
Table 3: Speed and Switching Capabilities 11
Table 4: Management Interfaces and FRUs 12
Table 5: Ordering Part Numbers (OPNs) 13
Table 6: Air Flow Label Legend 15
Table 7: Installation Kit Options 19
Table 8: Serial Terminal Program Configuration 33
Table 9: Configuration Wizard Session - DHCP 34
Table 10: Configuration Wizard Session - Static IP Configuration 35
Table 11: Link Port Specification 43
Table 12: Uplink LINK Port Specifications 44
Table 13: Service LINK Port Specifications 44
Table 14: MEX6200 Services 44
Table 15: COM Port Specification 45
Table 16: COM Port Specification 45
Table 17: ALARM Interfaces, Pin Function 46
Table 18: MNG Port Specifications 47
Table 19: Control Connector Wiring 48
Table 20: ETH Port Connector, Pin Functions 48
Table 21: MNG Port Specifications 49
Table 22: LINK Ports in Protected Configuration 50
Table 23: Status LEDs 52
Table 24: System Status LED Assignments 53
Table 25: Fan Status LED Assignments 54
Table 26: Power Supply Unit Status LED Assignments 55
Table 27: Bad Port LED Assignments 55
Table 28: Port LEDs in Ethernet System Mode 56
Table 29: Port LEDs in InfiniBand System Mode 56
Table 30: MEX6200 LEDs 57
Table 31: Long Haul Troubleshooting 60
Table 32: MEX6200 Troubleshooting 62
Table 33: TX6240 Specifications 65
Table 34: TX6280 Specifications 66
Table 35: MEX6200 Specifications 67
Table 36: OPNs for Replacement Parts 68

Table 37: RJ-45 CONSOLE Pinout 72
Table 38: RJ-45 I2C Pinout 72

Revision History

Table 1 - Revision History Table

Date	Revision	Description
June 2015	1.2	Added Hebrew safety warnings Added Japan VCCI Statement Updated “Specifications” Updated “Mounting Options”
December 2014	1.1	Updated Section 2.3 Package Contents
January 2015	1.0	First release of the new edition

About this Manual

This manual describes the installation and basic use of the Mellanox Long Haul systems.

Intended Audience

This manual is intended for IT managers and system administrators.

References

Table 2 - References

Document	Description
SwitchX® Switch System Hardware Release Notes	For possible hardware issues see the switch support product page. This document can be found on the support web page for this product.
MLNX-OS® User Manual	This document contains information regarding configuring and managing MLNX-OS software- see http://www.mellanox.com/page/mlnx_os.

Conventions

The following icons are used throughout this document to indicate information that is important to the user.

This icon makes recommendations to the user.

This icon indicates information that is helpful to the user.

This icon indicates a situation that can potentially cause personal injury or damage to hardware or software.

Risk of electric shock!

1 Introduction to Mellanox MetroX™Long Haul Systems

1.1 Overview

Mellanox MetroX series extends Mellanox's RDMA solutions for high-performance technology to local, campus and metro applications. It enables data sharing and support for disaster recovery, 40Gb/s RDMA execution over distant sites - up to 80km using WDM long-haul transceivers.

While InfiniBand products have been traditionally deployed for their high-performance interconnect benefits within the data center, Mellanox MetroX systems, implementing long-haul InfiniBand, enable connecting between data centers deployed across multiple geographically distributed sites, extending the same world-leading interconnect benefits of InfiniBand beyond local data centers and storage clusters.

Mellanox's MetroX is the perfect cost-effective, low power, easily managed and scalable solution that enables today's data centers and storage to run over local and distributed InfiniBand fabrics, managed as a single unified network infrastructure. The TX6240 and TX6280 systems, which implement long-haul InfiniBand, can transfer data up to distances of 40km and 80km, respectively. The systems enable aggregate data and storage networking over a single, consolidated InfiniBand fabric. The long-haul InfiniBand technology guarantees high-performance, high-volume data sharing between distant sites, enabling existing data centers' expansion, disaster recovery, data mirroring and campus connectivity.

MetroX enables a campus network to assemble large aggregate clusters, all connected and easily managed by an InfiniBand Subnet Manager - an embedded manager, OpenSM, or using Mellanox's Unified Fabric Manager (UFM®).

Figure 1: Long Haul TX6240/TX6280 Front Side View

1.2 Speed and Switching

Table 3 describes maximum throughput and interface speed per system model.

Table 3 - Speed and Switching Capabilities

System Model	10GbE* SFP+ Interfaces	40/56GbE QSFP+ Interfaces	Throughput
TX6240	N/A	2 FDR10 QSFP+ uplink 2 FDR QSFP+ downlink	80Gb/s

Table 3 - Speed and Switching Capabilities

System Model	10GbE* SFP+ Interfaces	40/56GbE QSFP+ Interfaces	Throughput
TX6280	N/A	1 FDR10 QSFP+ uplink 1 FDR QSFP+ downlink	40Gb/s

*The switches can support 10Gb/s interfaces using QSFP to SFP adapters

1.3 Management Interfaces and FRUs

Table 4 lists the various management interfaces and available replacement parts per system model.

Table 4 - Management Interfaces and FRUs

System Model	USB	MGT Ports Qty.	MGT Ports Location	I^2C	Console	Replaceable PSU	Replaceable Fan
TX6240	Front	2	Front (x2)	Rear	Front	2 FRUs	1 FRU
TX6280	Front	2	Front (x2)	Rear	Front	2 FRUs	1 FRU

1.4 Features

1.4.1 Network Management Feature

For a full feature list, refer to the product brief of the relevant system:

System Model	USB
TX6240	http://www.mellanox.com/related-docs/prod_long_haul_systems/MetroX_TX6240.pdf
TX6280	http://www.mellanox.com/related-docs/prod_long_haul_systems/MetroX_TX6280.pdf

1.5 Certifications

The list of certifications (such as EMC, Safety and others) per system for different regions of the world is located on the Mellanox website at:

http://www.mellanox.com/page/environmental_compliance

1.6 Ordering Information

the following table lists ordering information for the available systems. Please pay attention to the airflow direction when ordering your system. For more details, see “Air Flow” on page 15._

Table 5 - Ordering Part Numbers (OPNs)

System Model	OPN	Description
TX6240	MTX6240-2F_BL	MetroX™ 40km WDM lossless long haul 40G system bundle, 2 long-haul QSFP+ ports, PSU side to connector side airflow, RoHS6
TX6280	MTX6280-2F_BL	MetroX™ 80km WDM lossless long haul 40G system bundle, 1 long-haul QSFP+ port, PSU side to connector side airflow, RoHS6

2 Installation

Installation and initialization of the system require attention to the normal mechanical, power, and thermal precautions for rack-mounted equipment.

The rack mounting holes conform to the EIA-310 standard for 19-inch racks. Take precautions to guarantee proper ventilation in order to maintain good airflow at ambient temperature.

➢ ***The installation procedure for the Metrox system involves the following phases:***

1. Follow the safety warnings in Section E.2,“Installation Safety Warnings (English),” on page 75.
2. Pay attention to the air flow consideration within the system and rack - refer to “Air Flow” on page 15.
3. Make sure that none of the package contents is missing or damaged - see “Package Contents” on page 17
4. Mount the system to the rack - see “Mounting Options” on page 19.
5. Ground the system, refer to “Grounding” on page 26.
6. Connect the WDFM
7. Power on the system - refer to “Initial Power On” on page 31
8. Perform system bring-up - see “System Bring-Up” on page 33

FRU replacements are described in Section 2.10 on page 37.

2.1 Safety Warnings

Prior to the installation, please review the safety warnings as follows:

For Nordic Countries Notices, see .Section E.1,“Nordic Countries Notices,” on page 75

For Safety Warnings in English, see Section E.2,“Installation Safety Warnings (English),” on page 75.

For Safety Warnings in Hebrew, see Section E.3, “אזהרות בטיחות בהתקנה (עברית),” on page 78.

For Safety Warnings in Chinese, see page 82.

For Safety Warnings in French, see Section E.5, “Avertissements de sécurité pour l'installation (French),” on page 85.

For Safety Warnings in German, Section E.6, “Installation Sicherheitshinweise(German),” on page 88.

For Safety Warnings in Spanish, see Section E.7, “Advertencias de seguridad de instalación (Spanish),” on page 92.

For Safety Warnings in Russian, see Section E.8, “Предупреждения по технике безопасности при установке (Russian),” on page 95.

For Safety Warnings in Romanian, see Section E.9, “Avertismente privind siguranţa la instalare (Romanian),” on page 98.

For Safety Warnings in Croatian, see Section E.10, “Sigurnosna upozorenja za instaliranje (Croatian),” on page 102.

For Safety Warnings in Italian, see Section E.11, “Avvertenze di sicurezza per l’installazione (italiano),” on page 105.

For Safety Warnings in Turkish see Section E.12, “Montaj Güvenlik Uyarıları (Türkçe),” on page 109.

2.2 Air Flow

Mellanox systems are offered with two air flow patterns:

- Connector (front) side inlet to power side outlet - marked with red labels on the power supply side as shown in Figure 2.
- Power (rear) side inlet to connector side outlet - marked with blue labels on the power supply side as shown in Figure 3.

All servers and systems in the same rack should be planned with the same air-flow direction.

All FRU components need to have the same air flow direction. A mismatch in the air flow will affect the heat dissipation.

Table 6 provides an air flow label color legend and respective OPN designations,

Table 6 - Air Flow Label Legend

Direction	Label	OPN Designation	Description
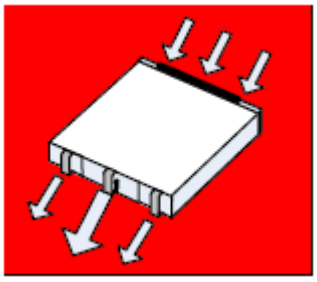		R	Connector side inlet to power side outlet. Red labels are placed on the power inlet side.

Table 6 - Air Flow Label Legend

Direction	Label	OPN Designation	Description
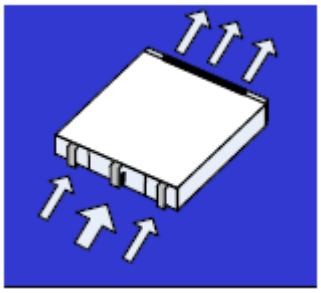		F	Power side inlet to connector side outlet. Blue labels are placed on the power inlet side.

Figure 2: Air Flow Direction Marking - Connector Side Inlet to Power Side Outlet

Figure 3: Air Flow Direction Marking - Power Side Inlet to Connector Side Outlet

2.3 Package Contents

Before installing your new system, unpack the system, and check, against the parts list below, that all the parts have been sent. Check the parts for visible damage that may have occurred during shipping.

The MTX6240-2F_BL package content is as follows:

- 1 x MTX6240-2SFS system
- 1 x 3R transponder (MEX6200):
  - MEX6200 unit
  - 4 x Optical module, 10GbE SFP+, LC-LC, DWDM C-Band, 40km. CH#28 up to CH#31
  - Ethernet cable
  - Mellanox passive ribbon fiber hybrid enable, MPO to 8XLC, 0.5m
  - 3m RS-232 terminal cable
  - Power cords
  - AC power: 3m power cord equipped with the appropriate plug
  - Kit for rack installation: 19", 23" (if ordered), or 600 mm ETSI (if ordered)
  - Fiber tray
  - 8 x Flat Phillips screws
  - 4 x Phillips pan-head M6 screws
  - 4 x M6 cage nuts
- 1 x Rail kit
- 2 x Power cable for each power supply unit – Type C13 to C14, length 183cm
- 1 x Harness DB9 to RJ-45
- 1 x Mellanox® optical module, 40Gb/s, QSFP, MPO, 850nm, SR4L up to 30m
- 1 x Mellanox® passive fiber hybrid cable, MPO to 8xLC, 5m
- 1 x Quick Start Guide

The MTX6280-2F_BL package content is as follows:

- 1 x MTX6280-2SFS System
- 1 x 3R transponder (MEX6200):
  - MEX6200 unit
  - 4 x Mellanox® optical module, 10GbE SFP+, LC-LC, 850nm, SR up to 300m
  - 4 x Optical module, 10GbE SFP+, LC-LC, DWDM C-Band, 80km. CH#28 up to CH#31
  - Ethernet cable
  - Mellanox passive ribbon fiber hybrid enable, MPO to 8XLC, 0.5m
  - 3m RS-232 terminal cable
  - Power cords
  - AC power: 3m power cord equipped with the appropriate plug

  - Kit for rack installation: 19", 23" (if ordered), or 600 mm ETSI (if ordered)
  - Fiber tray
  - 8 x Flat Phillips screws
  - 4 x Phillips pan-head M6 screws
  - 4 x M6 cage nuts
- 1 x Rail kit
- 1 x Power cable for each power supply unit – Type C13 to C14, length 183cm
- 1 x Harness DB9 to RJ-45
- 1 x Mellanox® optical module, 40Gb/s, QSFP, MPO, 850nm, SR4L up to 30m
- 1 x Mellanox® passive fiber hybrid cable, MPO to 8xLC, 5m
- 1 x Quick Start Guide

If anything is damaged or missing, contact your sales representative at support@mellanox.com.

2.4 Mounting Options

2.4.1 TX6240/TX6280 Mounting

There are two installation kit options: standard and short. Standard depth systems should be mounted using the standard rail kit; short systems can be mounted using either of the rail kits.

Table 7 - Installation Kit Options

Kit OPN	Rack Size
MSX60-BKIT	40-60 cm deep (Short)
MSX60-SKIT	60-80 cm deep (Standard)

The following parts are included in the rail kit rack (see Figure 4):

- Two rails
- Two rail slides
- Two system slides
- 16 recessed flat head (6-32) screws (with extras)
- 10 caged nuts
- 10 pan head (M6) screw bolts

Figure 4: Rack Rail Kit Parts

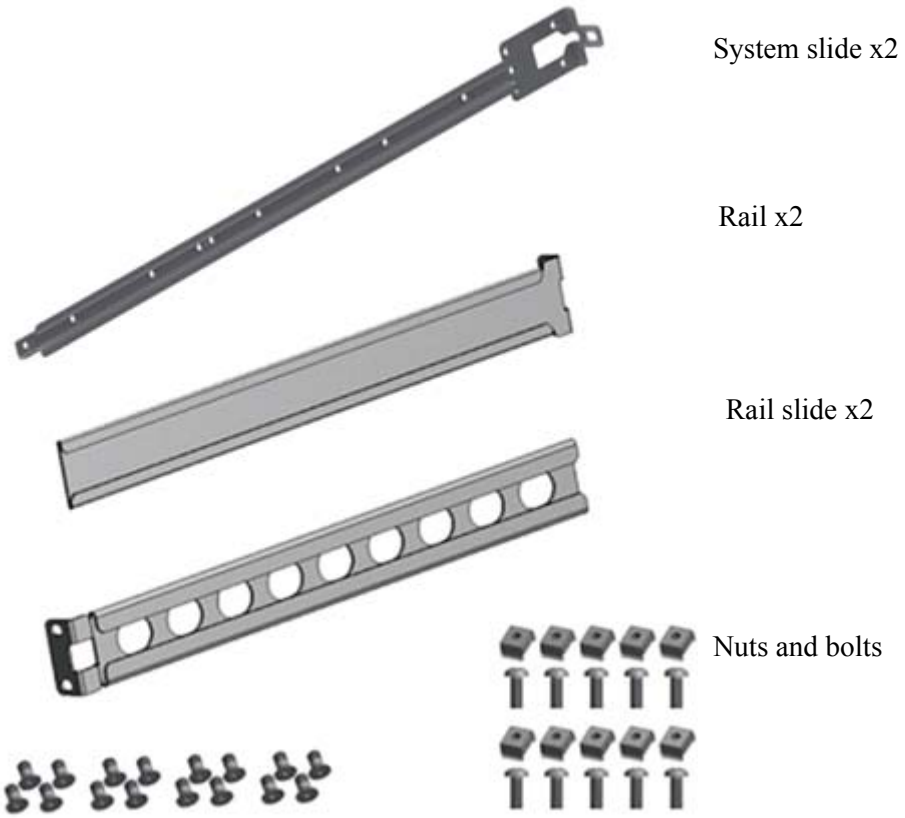

➢ ***Planning the system's placement in the rack***

Before mounting the system to the rack, select the way you wish to place the system. Pay attention to the airflow within the rack cooling, connector and cabling options.

While planning how to place the system, review the following points:

- Make sure the system air flow is compatible with your installation selection. It is important to keep the airflow within the rack in the same direction.
- In case there are cables that cannot bend within the rack or in case more space is needed for cable bending radius, it is possible to recess the connector side or the FRU side by 2" (5.08cm) by optional placement of the system's rails.
- The FRU side is extractable. Mounting the sliding rail inverted to the system will allow you to slide the FRU side of the system, in and out.

➢ ***Mounting the slides to the system***

Step 1. The recession feature is bi-directional, meaning that you can recess the system either backward or forward.

Step 2. Screw the system slides onto the system. Use 5 flat head 6-32 screws for a short system and 7 screws for a standard depth system to connect each system slide. The recommended tightening torque is 1.5±0.2 Nm.

Figure 5: Screwing on the Rail

5 screws per side are needed for the short system.
7 screws per side are needed for the standard system.
If using a torque screwdriver to tighten the screws, set it to 1.5±0.2 Nm.

Step 3. Clip the caged nuts into the holes in the rack on the side of the rack you will be sliding the system into.

Figure 6: Inserting the Caged Nuts

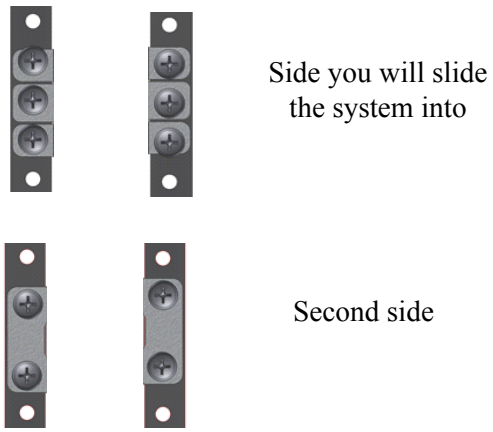

Step 4. Slide the rail into the rail slide.

Step 5. Using two of the M6 bolts for each corner, install the rails and rail slides in the rack. Do not tighten the bolts yet.

Figure 7: Slide the Rail into the Rail Slide

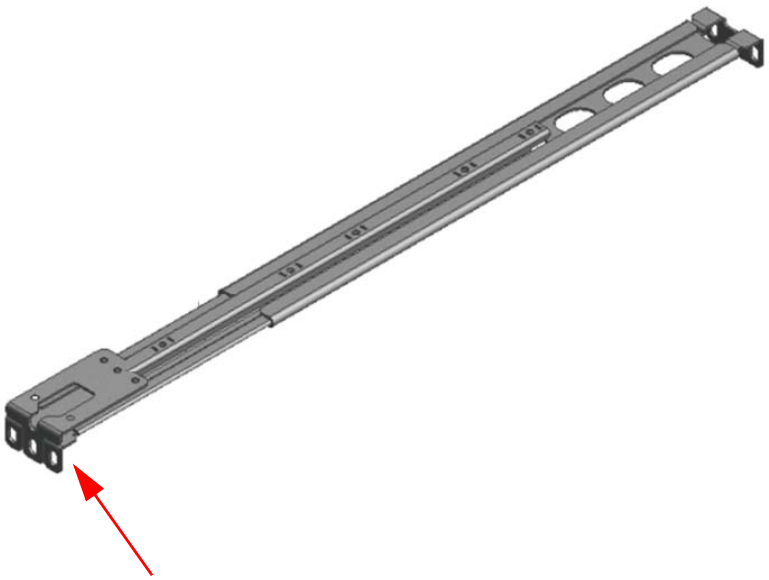

This side of the rail kit goes on the side of the rack you will slide the system into. This is the same side of the system that will be next to the vertical support.

Figure 8: Installing the Slides

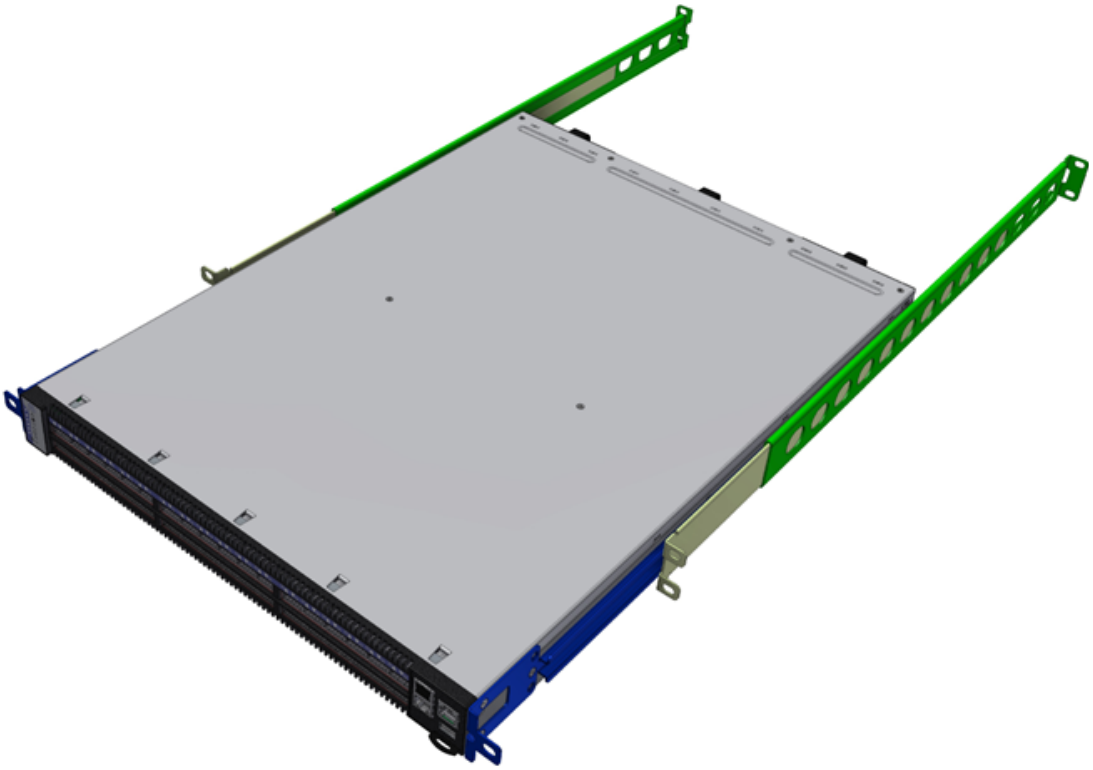

Step 6. Slide the system into the rails.

Step 7. Place the system and screw the bolts into the nuts. Tighten the bolts to 4.5±0.5 Nm.

Figure 9: System Placement in the Rack

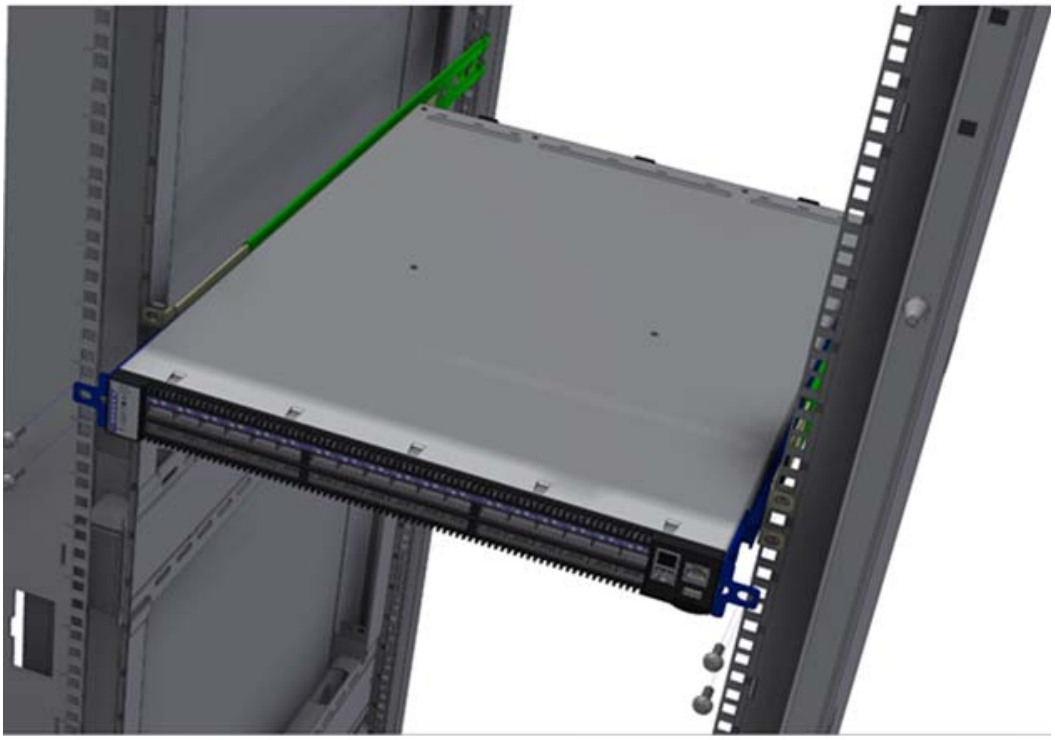

Figure 10: Installation Completed

2.4.2 MEX6200 Mounting

In case you are required to transfer the MEX6200 WDM unit after the rack mount installation is complete, please remove the system from the rack and ship it separately. In no case should you ship the MEX6200 installed in a rack mount.

2.4.2.1 Rack Kit Contents

Figure 11: Rack Installation Kit

1 x Rack mount 19" left
1 x Rack mount 19" right
8 x Flat Phillip 6-32X1/4 screw
4 x M6 Pan head Phillips screw
4 x M6 Cage nut
1 x Flat washer
1 x Fiber tray

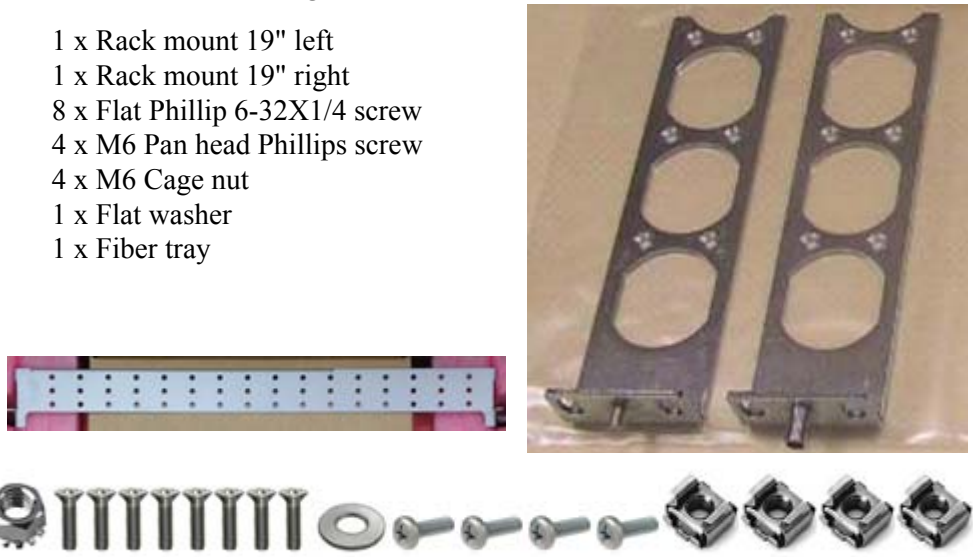

2.4.2.2 Rack Installation

➢ ***To mount the MEX6200 unit:***

Step 1. Attach the left and right mounting brackets (shown in Figure 12) to the unit, by fastening the 8 screws provided in the package, as illustrated in Figure 13. Note that each of the brackets can be shifted by 6cm, inside or outside.

Figure 12: Rack Mount Brackets

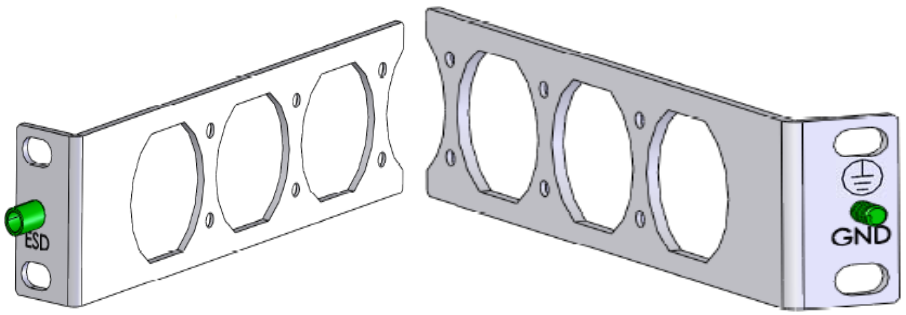

Figure 13: Brackets Attached to the MEX6200 Unitt

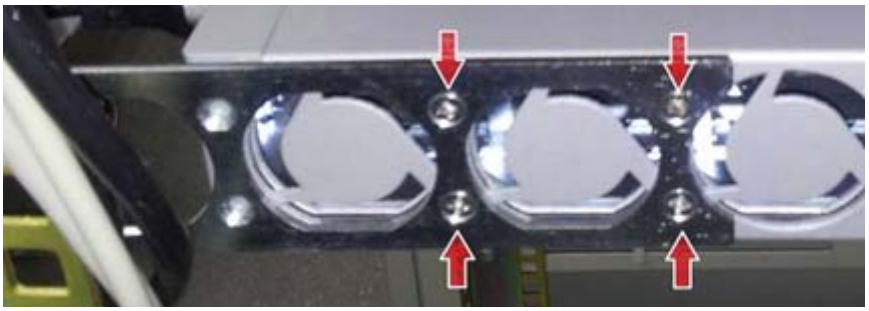

Step 2. Snap the four M6 nuts in the cabinet's slots.

Step 3. Fasten two of the M6 screws in the top-left and bottom-right nuts, as shown in Figure 14. The recommended screw torque is 4.5±0.5 Nm.

Step 4. Install the provided fiber tray. Fasten two M6 screws in the empty nuts to secure it to the rack. See Figure 15.

Step 5. Connect all modules and cables to the unit.

Figure 14: Attaching the Brackets to the Rack

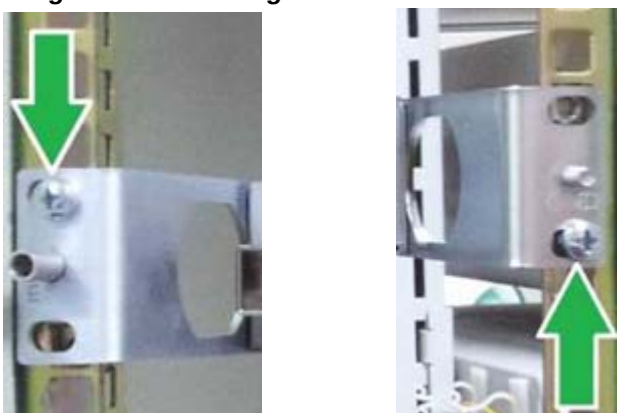

Figure 15: Installed Fiber Tray

2.5 Grounding

2.5.1 TX6240/TX6280 Grounding

Check to determine if your local or national electrical codes require an external ground to all IT components. If so, connect a ground wire to one of the casing screws and connect the other end to a valid ground. If you choose to not use the ground screw, make sure that the rack is properly grounded and that there is a valid ground connection between the chassis of the system, and the rack. Test the ground using an Ohm meter.

Some national and/or local codes may require IT components to be bonded and externally grounded (not including the power cord ground). You must follow all national and local codes when installing this equipment.

2.5.2 MEX6200 Grounding

For your protection and to prevent possible damage to equipment when a fault condition occurs on the cables connected to the equipment (for example, a lightning stroke or contact with high voltage power lines), the case of the MEX6200 unit must be properly grounded at all times. Any interruption of the protective (grounding) connection inside or outside the equipment, or the disconnection of the protective ground terminal, can make this equipment dangerous. Intentional interruption is prohibited.

When an MEX6200 unit is installed in a rack, make sure that the rack is properly grounded and connected to a reliable, low resistance grounding system.

Before connecting any cables, the protective ground terminal of the MEX6200 must be connected to a protective ground (see Connection Data.

The grounding must also be made through the AC power cable, which should be inserted in a power socket (outlet) with protective ground contact. Therefore, the power cable plug must always be inserted in a socket outlet provided with a protective ground contact, and the protective action must not be negated by use of an extension cord (power cable) without a protective conductor (grounding).

Any interruption of the protective (grounding) conductor (inside or outside the device) or disconnecting the protective earth terminal can make the device dangerous.

The MEX6200 protective ground terminals must be connected to protective ground before power is applied and before connecting any other cable. This connection is made through the AC power cable.

The power cord plug should only be inserted in an outlet provided with a protective ground (earth) contact. The protective action must not be negated by using an extension cord (power cable) without a protective conductor (grounding).

Dangerous voltages may be present on the cables connected to the MEX6200:

- Never connect cables to an MEX6200 unit if it is not properly installed and grounded. This means that its power cable must be inserted in an outlet provided with a protective ground (earth) contact before connecting any user or network cable to the MEX6200
- Disconnect all the cables connected to the connectors of the MEX6200 before disconnecting the unit's power cable.

- In Finland, Norway and Sweden, CLASS I PLUGGABLE EQUIPMENT TYPE A must have the following marking text to state that the equipment must be permanently connected to an earthed mains socket-outlet:
- In Finland: "Laite on liitettävä suojakoskettimilla varustettuun pistorasiaan"
- In Norway: "Apparatet må tilkoples jordet stikkontakt"
- In Sweden: "Apparaten skall anslutas till jordat uttag"

The protective ground terminal of the WDM unit, located on the rack mount, must be connected to a protective ground.

Figure 16: Grounding the MEX6200

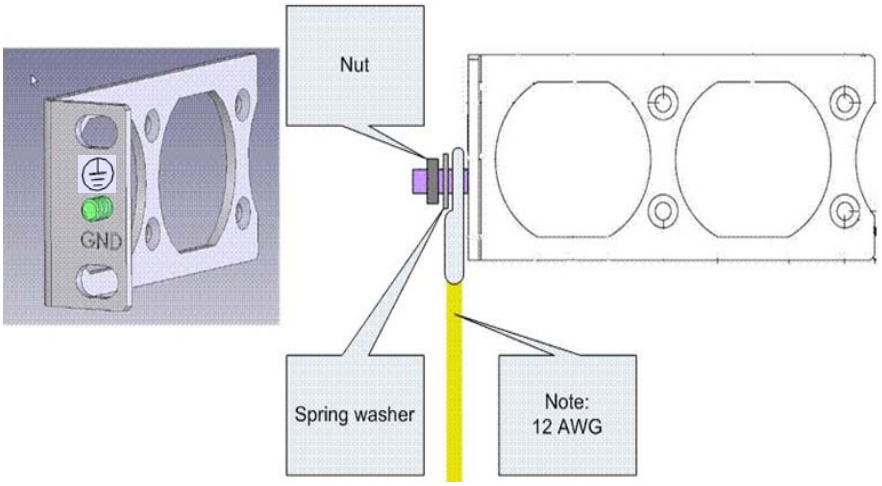

2.6 Connecting the TX6240/TX6280 System to the MEX6200 Unit

➢ ***To Connect the MEX6200 to the TX6240 or TX6280, perform the next steps:***

Step 1. Connect the provided Ethernet cable to the mgmt1 interface of the system on one end and the ETH port of the MEX6200 on the other.

Step 2. Insert the DWDM C-Band optical modules into their appropriate ports, beginning with Ch #28 to Port 1, Ch #29 to Port 3, etc.

Step 3. Connect the ribbon cable from the MEX6200 MUX and DEMUX ports to the uplink data ports. Make sure to connect LC1 to Port 1, LC2 to Port 3, etc. See Figure 17.

Step 4. Clip the loose fibers of the ribbon cable.

Step 5. Insert the SFP+ SR modules into the downlink ports of the WDM (2, 4, etc.)

Step 6. Insert the QSFP SR4L modules into the system's EXT ports.

Step 7. Connect the fiber cable connector to the EXT ports on one end and to the downlink ports of the WDM (LC1 to Port 2, LC2 to Port 4, etc).

Step 8. Connect the MEX6200 unit to a second MEX6200 unit through the COM1 port, using an LR single-mode fiber cable, as illustrated in Figure 19.

The MEX6200 does not have a power ON/OFF system, and therefore it starts operating as soon as power is applied. To control the connection of power to the MEX6200 it is recommended to use an external power ON/OFF system that disconnects all poles simultaneously. For example, the circuit breaker used to protect the supply line to the MEX6200 may also serve as the ON/OFF system. This type of circuit breaker should be rated 10A.

Power should be supplied to the MEX6200 through a power cable terminated in an appropriate plug, in accordance with the required power source.

Figure 17: MEX6200/TX6240 Connectivity

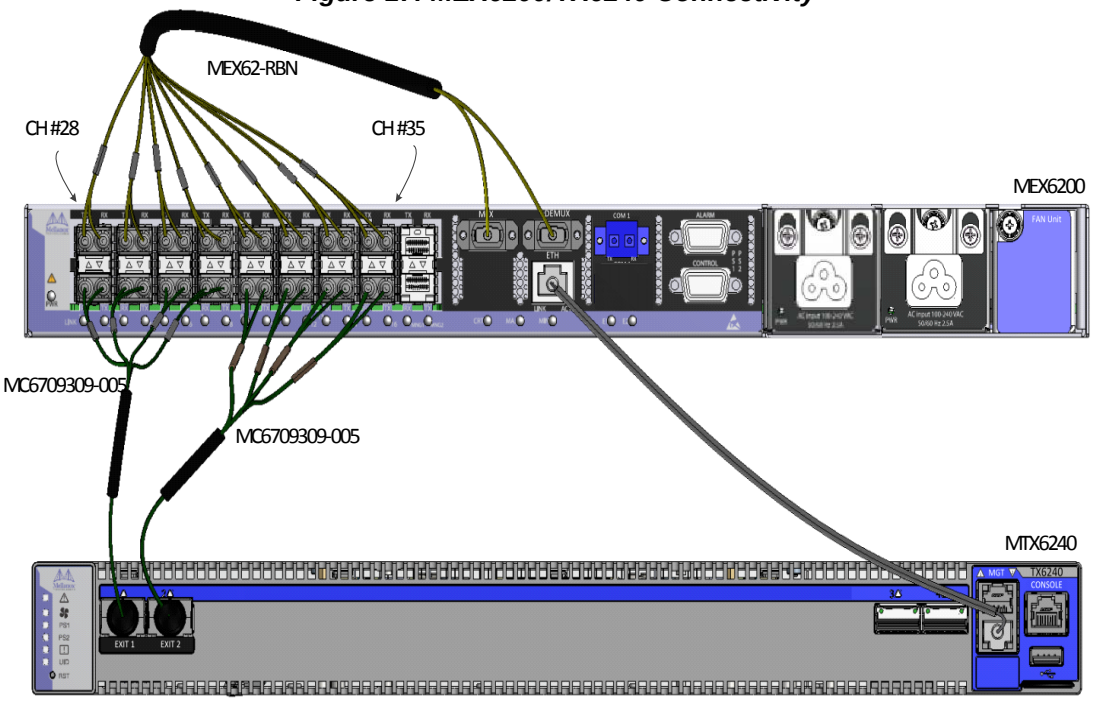

Figure 18: MEX6200/TX6280 Connectivity

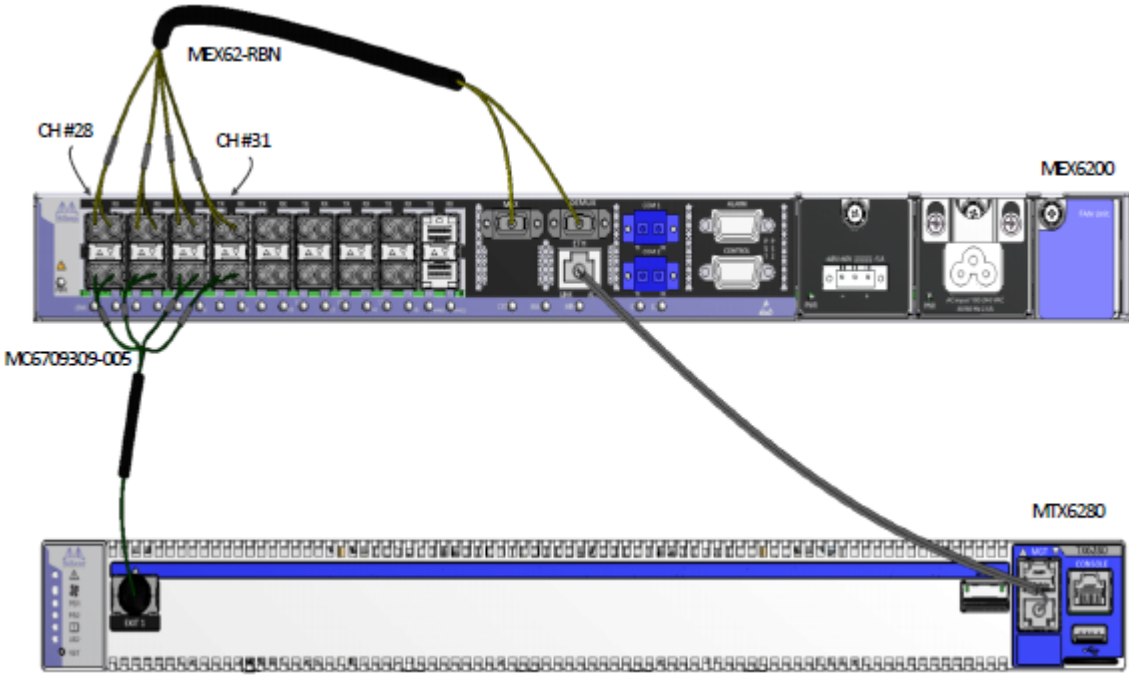

Figure 19: MetroX E2E Connectivity

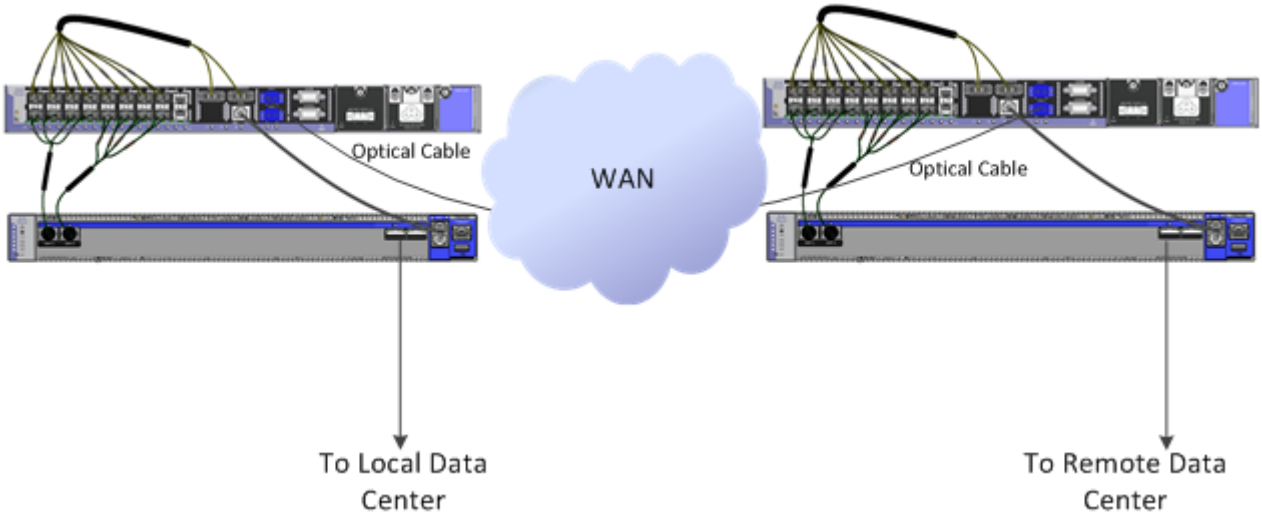

2.7 Cable Installation

All cables can be inserted or removed with the unit powered on.

➢ ***To insert a cable:***

press the connector into the port receptacle until the connector is firmly seated. The LED indicator, corresponding to each data port, will light when the physical connection is established. When a logical connection is made the relevant port LED will turn on.

➢ ***To remove a cable:***

disengage the locks and slowly pull the connector away from the port receptacle. The LED indicator for that port will turn off when the cable is unseated.

For more information about port LEDs refer to Section 3.3.1.6, “Port LEDs,” on page 56.

Do not force the cable into the cage with more than 40 newtons / 9.0 pounds / 4kg force. Greater insertion force may cause damage to the cable or the cage.

For further information and guidance, it is recommended to read more about Mellanox breakout cables on the Mellanox Community Website.

Figure 20: Breakout or Fanout Cable

2.8 Initial Power On

2.8.1 TX6240/TX6280 Initial Power On

The system's input voltage is auto-adjusting for 100 - 240VAC, 50-60Hz power connections. The power cords should be standard 3-wire AC power cords including a safety ground and rated for 15A or higher.

Caution: The system platform will automatically power on when AC power is applied. There is no power system. Check all boards, power supplies, and fan tray modules for proper insertion before plugging in a power cable.

This unit is intended for installation in a Restricted Access Location. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.

Step 1. Plug in the first power cable.

Do not plug the cords to power supplies yet.

Step 2. Plug in the second power cable.

Step 3. Wait for the system upload process.

It may take up to five minutes to turn on the system. If the System Status LED shows red after five minutes, unplug the system and call your Mellanox representative for assistance.

Step 4. Check the System Status LEDs and confirm that all of the LEDs show status lights consistent with normal operation, as shown in Figure 21 below. For more information, refer to "LEDs" on page 52.

Figure 21: System Status LEDs 5 Minutes After Power On

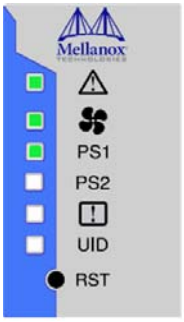

System with 1 PSU

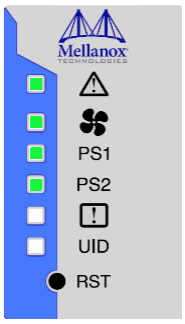

System with 2 PSUs

Caution: After inserting a power cable and confirming the green System Status LED light is on, make sure that the Fan Status LED shows green.

If the Fan Status LED is not green, unplug the power connection and check that the fan module is inserted properly and that the mating connector of the fan unit is free of any dirt and/or obstacles. If no obstacles were found and the problem persists, call your Mellanox representative for assistance.

Figure 22: Two Power Inlets - Electric Caution Notifications

CAUTION

Risk of electric shock and energy hazard. The two power supply units are independent.

Disconnect all power supplies to ensure a powered down state inside of the switch platform.

ACHTUNG

Gafahr des elektrischen Schocks. Entferrnen des Netzsteckers elnes Netz-teils spannungsfrei. Um alle Einhieten spannungs-frei zu machen sind die Netzstecker aller Netzteile zu entfernen

ATTENTION

Risque de choc et de danger e'lectriques. Le de'branch-ment d'une seule alimentation stabilise'e ne de'branch uniquement qu'un module "Alimentation Stabilise'e". Pour isoler completement le module en cause, Il faut de'brancher toutes les alimen-tations stabilise'es.

2.8.2 MEX6200 Initial Power On

Be careful with the handling of the fiber optics and modules. Do not touch the LC connectors and keep them with cover when not in use.

To power on the system:

Step 1. Plug-in the power cable

Step 2. Check the System LEDs and confirm that the PWR, CRT, MAJ, MIN LEDs show status lights consistent with normal operation.

Any yellow or red status LED is cause for concern and must be dealt with immediately. It can take up to 5 minutes to boot up, during which time the System Status LED may indicate red.

.

The MEX6200 unit is auto-configured via the TX6240/TX6280 system.

2.9 System Bring-Up

2.9.1 Configuring Network Attributes

The procedures described in this chapter assume that you have already installed and powered-on according to the instructions in this document.

➢ ***To perform initial configuration of the system, perform the following:***

Step 1. Connect a host PC to the Console RJ45 port of the system using the supplied harness cable (DB9 to RJ45). Make sure to connect to the Console RJ45 port and not to the (Ethernet) MGT port.

Step 2. Configure a serial terminal program (for example, HyperTerminal, minicom, or Tera Term) on your host PC with the settings described in Table 8. Once you perform that, you should get the CLI prompt of the system.

Table 8 - Serial Terminal Program Configuration

Parameter	Setting
Baud Rate	9600
Data bits	8
Stop bits	1

Table 8 - Serial Terminal Program Configuration (Continued)

Parameter	Setting
Parity	None
Flow Control	None

Step 3. Login as *admin* and use *admin* as password. On the first login, the MLNX-OS configuration wizard will start.

Step 4. To configure network attributes and other initial parameters to the system, follow the configuration wizard as shown in Table 9.

Table 9 - Configuration Wizard Session - DHCP

Wizard Session Display	Comments
Mellanox configuration wizard Do you want to use the wizard for initial configuration? yes	You must perform this configuration the first time you operate the system or after resetting the system. Type ‘y’ and then press <Enter>.
Step 1: Hostname? [switch]	If you wish to accept the default hostname, press <Enter>. Otherwise, type a different hostname and press <Enter>.
Step 2: Use DHCP on mgmt0 interface? [no] yes	Perform this step to obtain an IP address for the system. (mgmt0 is the management port of the system). If you wish the DHCP server to assign the IP address, type ‘yes’ and press <Enter>. If you type ‘no’ (no DHCP), then you will be asked whether you wish to use the ‘zeroconf’ configuration or not. If you enter ‘no’ (no Zeroconf), you must enter a *static* IP, and the session will continue.
Step 3: Enable IPv6? [yes]	The management interface will be able to use IPv6 addresses.
Step 4: Enable IPv6 auto-config (SLAAC) on mgmt0 interface? [no]	This turns on auto-configuration of the IPv6 addresses. This is unsuitable for DHCPv6. If you enter "no" (no IPv6), you will automatically be referred to Step 6.
Step 5: Enable DHCPv6 on mgmt0 interface? [no]	To enable DHCPv6 on the MGMT0 interface.

Table 9 - Configuration Wizard Session - DHCP

Wizard Session Display	Comments
Step 6: Admin password (Press <Enter> to leave unchanged)? <new_password> Step 6: Confirm admin password? <new_password>	To avoid illegal access to the machine, please type a password and then press <Enter>. Then confirm the password by re-entering it. Note that password characters are *not* printed.
You have entered the following information: <A summary of the configuration is now displayed.> To change an answer, enter the step number to return to or hit <enter> to save changes and exit. Choice: <Enter> Configuration changes saved.	The wizard displays a summary of your choices and then asks you to confirm the choices or to re-edit them. Either press <Enter> to save changes and exit, or enter the configuration step number that you wish to return to. Note: To re-run the configuration wizard, run the command "configuration jump-start" in Config mode.

The table below shows an example of static IP configuration for mgmt0 interface.

.

Table 10 - Configuration Wizard Session - Static IP Configuration

Wizard Session Display - Static IP Configuration (Example)
Mellanox configuration wizard Do you want to use the wizard for initial configuration? yes Step 1: Hostname? [] Step 2: Use DHCP on mgmt0 interface? [yes] no Step 3: Use zeroconf on mgmt0 interface? [no] Step 4: Primary IP address? [for example 192.168.10.4] 10.10.10.10 Mask length may not be zero if address is not zero (interface eth0) Step 5: Netmask? [0.0.0.0] 255.255.255.0 Step 6: Default gateway? [for example 192.168.10.1] 10.10.10.255 Step 7: Primary DNS server? Step 8: Domain name? Step 9: Enable IPv6? [yes] Step 10: Enable IPv6 autoconfig (SLAAC) on mgmt0 interface? [no] Step 11: Admin password (Enter to leave unchanged)? To change an answer, enter the step number to return to. Otherwise hit <enter> to save changes and exit. Choice: Configuration changes saved. To return to the wizard from the CLI, enter the "configuration jump-start" command from configure mode. Launching CLI... >

Step 5. Before attempting a remote (for example, SSH) connection to the system, check the mgmt0 interface configuration. Specifically, verify the existence of an IP address. To check the current mgmt0 configuration, enter the following commands:

```
switch (config) # show interfaces mgmt0
r-qa-sit-sx01 (config) # show interfaces mgmt0
Interface mgmt0 status:
   Comment:
   Admin up:           yes
   Link up:            yes
   DHCP running:       yes
   IP address:         10.209.28.50
   Netmask:            255.255.255.0
   IPv6 enabled:       yes
   Autoconf enabled:   no
   Autoconf route:     yes
   Autoconf privacy:   no
   DHCPv6 running:     no
   IPv6 addresses:     1
   IPv6 address:       fe80::202:c9ff:fe63:b55a/64
   Speed:              1000Mb/s (auto)
   Duplex:             full (auto)
   Interface type:     ethernet
   Interface source:   physical
   MTU:                1500
   HW address:         00:02:C9:63:B5:5A

   RX bytes:           968810197          TX bytes:       1172590194
   RX packets:         10982099           TX packets:     10921755
   RX mcast packets:   0                  TX discards:    0
   RX discards:        0                  TX errors:      0
   RX errors:          0                  TX overruns:    0
   RX overruns:        0                  TX carrier:     0
   RX frame:           0                  TX collisions:  0
                                          TX queue len:   1000
r-qa-sit-sx01 (config) #
```

Step 6. You are advised to check the software version embedded in your system, using the command ‘show version’. you can continue and compare this version to the latest version that can be retrieved from Mellanox support site. To upgrade software, simply refer to MLNX-OS user manual.

2.9.2 Remote Connection

Once the network attributes are set, you can access the CLI via SSH or the WebUI via HTTP/ HTTPs.

➢ ***To access the CLI, perform the following steps:***

Step 1. Set up an Ethernet connection between the system and a local network machine using a standard RJ45 connector.

Step 2. Start a remote secured shell (SSH) using the command: “ssh -l <username> <IP_address>”,

```
# ssh -l <username> <ip address>
```

```
Mellanox MLNX-OS Switch Management

Password:
```

Step 3. Login as admin (default username is *admin*, password *admin*).

Step 4. Once you get the CLI prompt, you are ready to use the system.

For additional information about MLNX-OS, refer to MLNX-OS User Manual located on Mellanox support web.

2.10 FRU Replacements

Never run the system more than 5 minutes with an uncovered (open) PSU or fan slot.

2.10.1 TX6240/TX6280 Power Supply and Fans

2.10.1.1 Power Supply

Mellanox systems equipped with two replaceable power supply units work in a redundant configuration. Either unit may be extracted without bringing down the system.

Make sure that the power supply unit that you are NOT replacing is showing all green, for both the power supply unit and System Status LEDs.

Power supply units have directional air flows similar to the fan module. The fan module airflow must coincide with the airflow of all of the power supply units. If the power supply unit airflow direction is different from the fan module airflow direction, the system's internal temperature will be affected.

For power supply unit air flow direction, refer to Section 2.2 on page 15.

➢ ***To extract a power supply unit:***

Step 1. Remove the power cord from the power supply unit.

Step 2. Grasping the handle with your right hand, push the latch release with your thumb while pulling the handle outward. As the power supply unit unseats, the power supply unit status LEDs will turn off.

Step 3. Remove the power supply unit.

Figure 23: Power Supply Unit Extraction

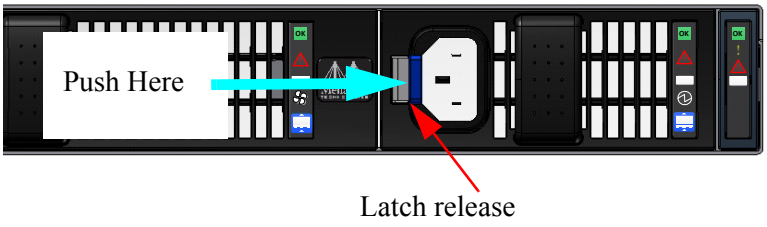

Figure 24: PS Unit Pulled Out

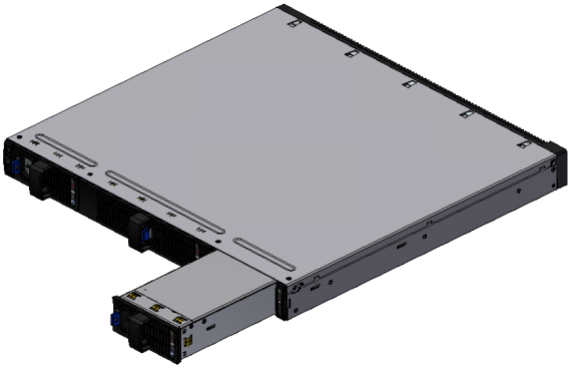

➢ ***To insert a power supply unit:***

Step 1. Make sure the mating connector of the new unit is free of any dirt and/or obstacles.

Do not attempt to insert a power supply unit with a power cord connected to it.

Step 2. Insert the power supply unit by sliding it into the opening until a slight resistance is felt.

Step 3. Continue pressing the power supply unit until it seats completely. The latch will snap into place, confirming the proper installation.

Step 4. Insert the power cord into the supply connector.

Step 5. Insert the other end of the power cord into an outlet of the correct voltage.

The green power supply unit indicator should light. If not, repeat the whole procedure to extract the power supply unit and re-insert it.

2.10.1.2 Fan

The system can operate indefinitely with less than a full compliment of fans in the fan modules, so long as the ambient temperature is below 45° Celsius.

Operation without a fan unit should not exceed two minutes.
During fan hot-swap, if the LED indicator is OFF, the fan unit is disconnected.

Make sure that the fans have the air flow that matches the model number. An air flow opposite to the system design will cause the system to operate at a higher (less than optimal) temperature.
For power supply unit air flow direction, refer to Section 2.2 on page 15

➢ ***To extract a fan unit:***

Step 1. For a fan unit composed of two fans: using two fingers, push both latch releases towards each other simultaneously while pulling the fan module out of the system. As the fan unseats, the Fan Status LED will turn off.
For a single fan unit: grasping the handle with your right hand, push the latch release with your thumb while pulling the handle outward. As the fan unit unseats, the fan unit status LEDs will turn off.

Step 2. Remove the fan unit.

Figure 25: Fan Module Latches

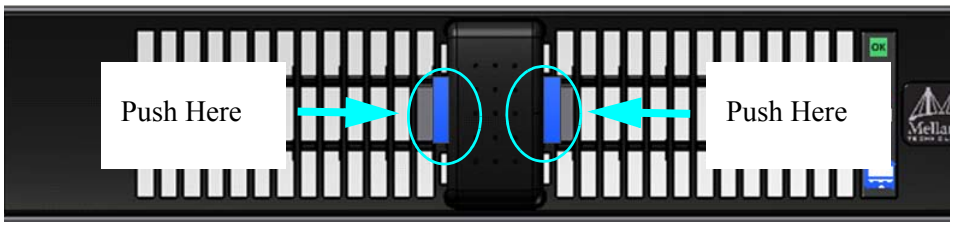

These two latches must be pushed towards each other at the same time while the module is pulled out.

➢ ***To insert a fan unit:***

Step 1. Make sure the mating connector of the new unit is free of any dirt and/or obstacles.

Step 2. Insert the fan unit by sliding it into the opening until slight resistance is felt. Continue pressing the fan unit until it seats completely

The green Fan Status LED should light. If not, extract the fan unit and reinsert it. After two unsuccessful attempts to install the fan unit, power off the system before attempting any system debug.

2.10.2 MEX6200 Power Supply and Fan

2.10.2.1Power Supply

The MEX6200 includes two AC power supplies with a standard three-pin IEC320 C5 connector 3A for connection to AC power.

2.10.2.2Fan

The MEX6200 is available with a pluggable and replaceable fan unit. The air intake vents are located on the right side. The fan unit has an automatic speed control mechanism that supports lower noise, improved MTBF and power saving.

CAUTION: Air intake vents should be clear of obstruction.

Figure 26: MEX6200 Power Supply and Fan Unit

3 Interfaces

TX6240/TX6280 The systems support the following interfaces:

- Data interfaces - InfiniBand and Ethernet
- 100/1000 MbE RJ45 management interface(s)
- USB port
- RS232 Console port
- I2C interface
- Reset button
- Status and Port LEDs

In order to review the full configuration options matrix, refer to Table 4, “Management Interfaces and FRUs”.

3.1 Data Interfaces

The data interfaces use QSFP+ connectors. The full list of interfaces per system is provided in Table 3, “Speed and Switching Capabilities,” on page 11.

Each QSFP+ port can be connected with QSFP+ cable or connector for 40/56Gb/s, or 10Gb/s when connecting through Mellanox QSFP+ to SFP+ (QSA) adapters.

- FDR is an InfiniBand data rate, where each lane of a 4X port runs a bit rate of 14.0625 Gb/s with 64b/66b encoding, resulting in an effective bandwidth of 56.25 Gb/s.

3.1.1 RS232 (Console)

FDR and FDR10 are only guarenteed to work with approved Mellanox cables.

The port labeled “Console” is an RS232 serial port used for initial configuration and debugging. Upon first installation of the system, you need to connect a PC to this interface and configure network parameters for remote connections. Refer to Section 2.9.1 to view the full procedure.

3.1.2 Management

The RJ45 Ethernet port labeled “MGT” provides access for remote management. The management port is configured with auto-negotiation capabilities by default (100MbE to 1000GbE). The management port network attributes (such as IP Address) need to be pre-configured via the RS232 console port before using the port. Refer to Section 2.9.1 to view the full procedure.

Make sure you use only FCC compliant Ethernet cables.

3.1.3 USB

The USB interface is USB 2.0 compliant and can be used by MLNX-OS software to connect to an external disk for software upgrade or file management. The USB connector comes with either regular or mini USB shapes.

To view the full matrix of the USB configuration options, refer to Table 4, “Management Interfaces and FRUs”.

USB 1.0 is not supported.

Do NOT use excessive force when inserting or extracting the USB disk from the connector.

3.1.4 I2C

The I2C connector is located either on the power supply side (banana connector), or on the front side (RJ45 connector).

The I2C interface is used for debugging and is intended for Mellanox debug personnel only.

3.1.5 Reset Button

The reset button is located on the front side panel under the status LEDs. This reset button requires a tool to be pressed.

DO NOT use a sharp pointed object such as a needle or a push pin for pressing the Reset button. Use a flat object to push the reset button.

➢ ***To reset the system and the CPU of its management board, perform the following:***

Push the Resetr button and keep it pressed for up to 14 seconds.

➢ ***To reset the system, the CPU of its management board and the "admin" password, perform the following:***

Push the Reset button and keep it pressed for at least 15 seconds. You will then be able to enter without a password and set a new password for the user *"admin"*.

3.2 MEX6200 Interfaces

The MEX6200 is a compact unit intended for installation in a 19-inch or 23-inch rack or placed on a desktop or shelf. The MEX6200 unit is a 19-inch/1U ETSI compliant with dual field-replaceable AC power supplies and a pluggable fan unit. All connections are made to the front panel. The MEX6200 front panel also includes indicator LEDs that show its operating status.

Figure 27,"MEX6200 Front Panel", provides a front view of the MEX6200 physical interface.

Figure 27: MEX6200 Front Panel

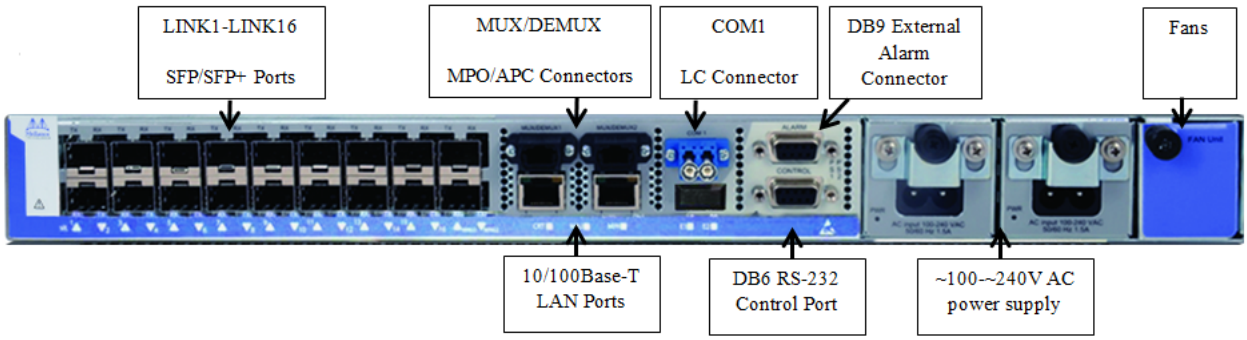

3.2.1 LINK Ports and Connectors

A link port is a part of an unprotected transponder or a protected transponder.

Table 11 - Link Port Specification

Uplink	Ports	• Unprotected: LINK 1, LINK 3, LINK 5, LINK 7, LINK 9, LINK 11, LINK 13, LINK 15 • Protected: LINK 1/LINK 3, LINK 5/LINK 7, LINK 9/LINK 11, LINK 13/LINK15
	Transceiver Type	• Higher rates: DWDM SFP+ transceiver
	Wavelengths	• DWDM: ITU G.694.1 Grid Channels 15 to 60 C-Band with 100 GHz spacing
Service	Ports	• Unprotected: LINK 2, LINK 4, LINK 6, LINK 8, LINK 10, LINK 12, LINK 14, LINK 16 • Protected: LINK 2, LINK 6, LINK10, LINK 14
	Transceiver Type	• SFP+ transceiver
	Service Types	• 10GbE-LAN

The following tables provide information regarding the fiber and connector specifications for the LINK ports.

Table 12 - Uplink LINK Port Specifications

Specification	Requirement
Fiber type	Single mode
Fiber size	2 mm optical fiber
Connector type	LC
Port type	Transponder
Transceiver type	SFP+

Each port has two optical connectors: one for the receive input and the other for the transmit output.

Table 13 - Service LINK Port Specifications

Specification	Requirement
Fiber type	Single mode or multi-mode
Fiber size	2 mm optical fiber
Connector type	LC
Port type	Transponder
Transceiver type	SFP or SFP+

3.2.1.1 MEX6200 Services

The following table describes the MEX6200 services.

Table 14 - MEX6200 Services

Service Type	Bit Rate	Standard
10GbE-LAN	10.31G	IEEE 802.3ae

3.2.1.2 Unprotected Transponders

The MEX6200 LINK ports are divided into groups of two. Each group composes a transponder entity, allowing up to eight independent transponders with each pair of ports (uplink/service) functioning as a single transponder.

- Uplink ports: Odd-numbered ports (LINK1, LINK3, LINK5, LINK7, LINK9, LINK11, LINK13, LINK15)
- Service ports: Even-numbered ports (LINK2, LINK4, LINK6, LINK8, LINK10, LINK12, LINK14, LINK16)

Figure 28: MEX6200 with 8 Unprotected Transponders

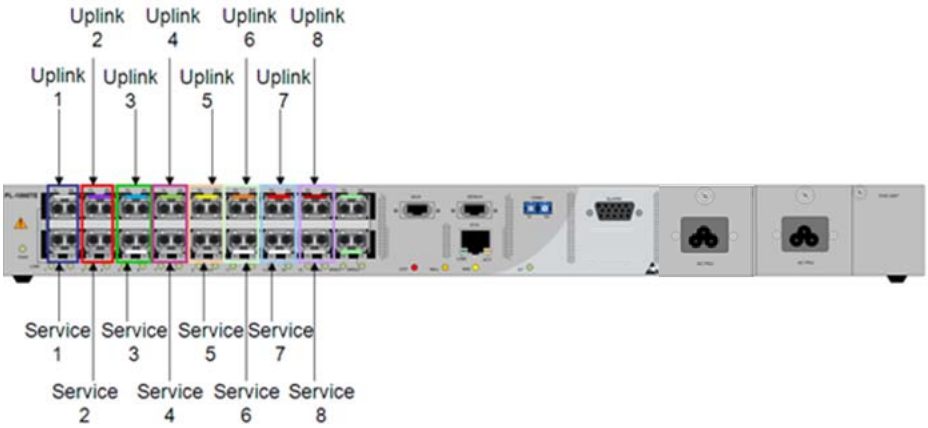

3.2.1.3 COM Port and Connector

The COM port is an LC connector placed on the front panel of the MEX6200. This port is connected to the network and is used to convey the aggregated optical signal. The single COM port is used for the unprotected configuration of the MEX6200. The COM port is a fixed duplex LC connector.

Table 15 - COM Port Specification

Specification	Requirement
Fiber type	Single mode
Fiber size	2 mm optical
Connector type	LC with or without protective shutters or SC
Port type	Optical COM port

3.2.1.4 MUX/DEMUX Ports and Connectors

The MUX/DEMUX ports are one or two Multifiber Pull Off (MPO) connectors suitable for a dedicated ribbon cable. The MUX/DEMUX port, together with the ribbon cable attached to it, is used to connect the uplink ports and OSC to the passive MUX/DEMUX module. In a dual port configuration, the front panel has two ports labeled "MUX/DEMUX 1" and "MUX/DEMUX 2".

Table 16 - COM Port Specification

Specification	Requirement
Fiber type	Single mode
Fiber size	2 mm optical fiber
Connector type	MUX/DEMUX: MPO/APC female
Port type	MUX/DEMUX connection

3.2.1.5 ALARM Ports and Connectors

The MEX6200 has an ALARM (or External Alarm) port for the environmental alarm. This port supports one input and one output.

The ALARM connector of the MEX6200 is a 9 pin D-type female connector that is used to connect to the external alarm system (for example, a buzzer) of the customer.

The ALARM connector provides two connectivity methods:

- Normally Open
- Normally Closed

The connector is wired in accordance with the following table

Table 17 - ALARM Interfaces, Pin Function

Pin	Designation	Function
1	ALARM Normally Open (ALARM1_NO)	In normal operation, pin 6 (ALARM Common) is internally connected to pin 2 (ALARM Normally Closed). Upon a Major alarm event, the internal connection of pin 6 (ALARM Common) is switched to this pin (pin 1).
2	ALARM Normally Closed (ALARM1_NC)	In normal operation, pin 6 (ALARM Common) is internally connected to this pin (pin 2). Upon a Major or Critical alarm event, the internal connection of pin 6 (ALARM Common) is switched to pin 1 (Alarm Normally Open)
6	ALARM Common (ALARM1_COM)	Common signal
3		Internally connected to GND.
7	ALARM IN 1	Input External Alarm
8	ALARM IN 2	Not connected
4 ([a])	ALARM Normally Open (ALARM2_NO)	In normal operation, pin 9 (ALARM Common) is internally connected to pin 5 (Alarm Normally Closed). Upon a Major alarm event, the internal connection of pin 9 (ALARM Common) is switched to this pin (pin 4).
5 (a.)	ALARM Normally Closed (ALARM2_NC)	In normal operation, pin 9 (ALARM Common) is internally connected to this pin (pin 5). Upon a Major alarm event, the internal connection of the pin 9 (ALARM Common) is switched to pin 4 (ALARM Normally Open).
9 (a.)	ALARM Common (ALARM2_COM)	Common signal

a. The pin will be implemented in a future software release.

Figure 29: External ALARM Diagram

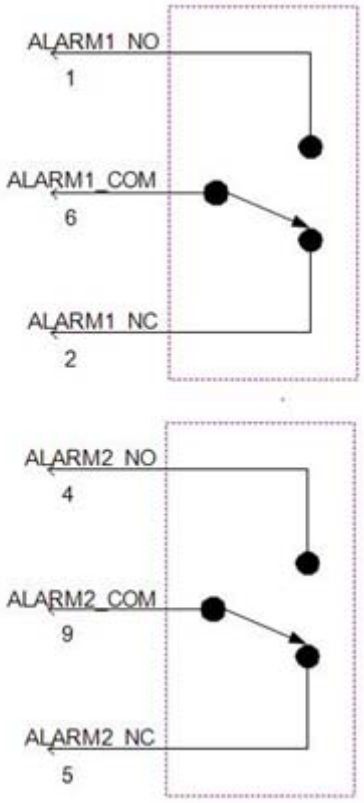

3.2.2 Management Ports and Connectors

This section describes the MEX6200 management ports. The MNG ports accept optical or copper (electrical) SFP modules.

Table 18 - MNG Port Specifications

Specification	Requirement
Fiber/cable type	Optical SFP: Single mode or multi-mode Copper SFP: Twisted
Wavelength	Single mode: CWDM: 1290 nm or 1310 nm DWDM: 1490 nm or 1510 nm Multi-mode: 850 nm
Fiber size	2 mm optical fiber
Connector type	Optical SFP: LC Copper SFP: RJ-45
Port type	Management

3.2.2.1 CONTROL Port and Connector

The RS-232 asynchronous supervisory port has a DCE interface that supports a data rate of 9600 bps.

Initial configuration of the MEX6200 is performed using the CLI management interface from any ASCII terminal (dumb terminal or personal computer (PC) running a terminal emulation program) directly connected to the MEX6200 serial CONTROL connector.

After the initial configuration, the MEX6200 may be managed, supervised, and configured by a Web browser or an SNMP network management system.

The CONTROL connector is a 9-pin D-type female connector with RS 232 asynchronous DCE interface, intended for direct connection to a supervision terminal. The connection to the supervision terminal is by means of a straight cable (a cable wired point to point). The connector is wired in accordance with the following table.

Table 19 - Control Connector Wiring

Pin	Function	Direction
2	Transmit Data (TX)	From MEX6200
3	Receive Data (RX)	To MEX6200
5	Signal Ground (SIG)	Common reference

3.2.2.2 ETH Port and Connector

The MEX6200 can be accessed through the Ethernet 10/100 Base T LAN port for local management. The MEX6200 ETH port is a 10/100 Base-T Ethernet interface terminated in an RJ 45 connector. The port can be connected by a standard station cable to any type of 10/100 Base-T Ethernet port.

Connector pin functions are listed in the following table.

Table 20 - ETH Port Connector, Pin Functions

Pin	Designation	Function
1	RXD+	Receive Data output, + wire
2	RXD-	Receive Data output, - wire
3	TXD+	Transmit Data input, + wire
4,5	-	Not connected
6	TXD-	Transmit Data input, - wire
7,8	-	Not connected

3.2.2.3 MNG Ports and Connectors

The MEX6200 is equipped with two SFP based MNG ports labeled "MNG 1" and "MNG 2". These ports enable remote management of a MEX6200 unit or local cascading in a multi-chassis application.

This management channel may be multiplexed as an extra OSC wavelength by the optical MUX/DEMUX. The MEX6200 supports two OSCs for multi-chassis application and for remote management with facility protection. The facility protection is for the management network when the two management ports are active and there is more than one management route between the nodes. In point-to-point topology without protection, only one OSC port is needed on each side (it can be either of the two). For a protected point-to-point or ring topology, both OSC ports should be used.

The MEX6200 uses the standard Rapid Spanning Tree Protocol (RSTP) to uniquely determine the route for the management traffic between the nodes, and to dynamically change the management route should a facility failure occur.

The MNG ports accept optical or copper (electrical) SFP modules.

Table 21 - MNG Port Specifications

Specification	Requirement
Fiber/cable type	• Optical SFP: Single mode or multi-mode • Copper SFP: Twisted pair
Wavelength	• Single mode: CWDM: 1290 nm or 1310 nm DWDM: 1490 nm or 1510 nm • Multi-mode: 850 nm
Fiber size	2 mm optical fiber
Connector type	Optical SFP: LC Copper SFP: RJ-45
Port type	Management

3.2.3 Facility Protection for MEX6200

In protected configuration, the MEX6200 supports unidirectional, non-revertive, 1+1 facility protection.

- Unidirectional: Each side selects the Active line independently.
- Non-revertive: To reduce the number of traffic hits, no switching occurs if the traffic is restored on the Standby line while there are no faults on the Active line.
- 1+1 facility: The transmitted traffic is copied to both fibers.
- The MEX6200 provides two types of facility protection:
- Transponder protection: Protects the optical fiber and transponder uplink transceiver.
- Fiber protection: Protects the optical fiber.

3.2.3.1 Transponder Protection

The transponder protection ensures service continuity in case of a fiber break or a failure of an uplink transceiver.

The transponder protection is usually provided by the MEX6200 with two MUX/DEMUX modules. See the following figure.

Figure 30: MEX6200 with 4 Protected Transponders

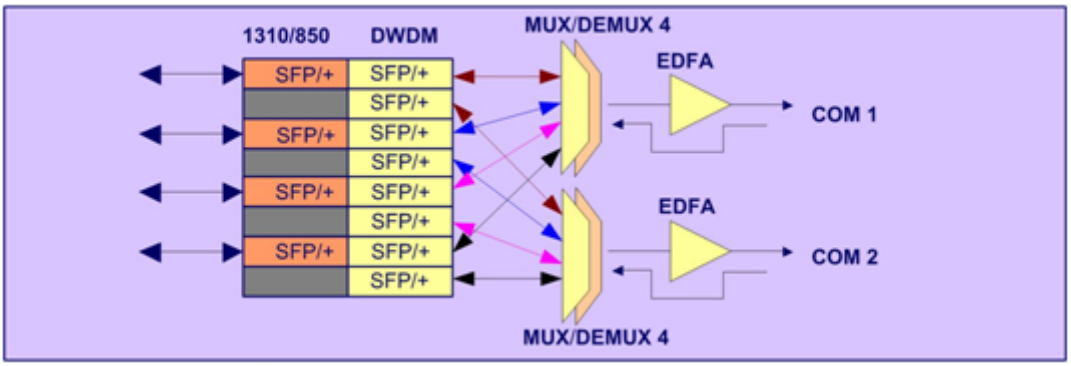

For transponder protection, four LINK ports function as a single protected transponder as follows.

Table 22 - LINK Ports in Protected Configuration

Protection Group	Port	Role	Transceiver Type
Group 1	LINK 1	Working uplink	SFP+/SFP
	LINK 2	Service port	SFP+/SFP
	LINK 3	Protection uplink	SFP+/SFP
	LINK 4	Unused	
Group 2	LINK 5	Working uplink	SFP+/SFP
	LINK 6	Service port	SFP+/SFP
	LINK 7	Protection uplink	SFP+/SFP
	LINK 8	Unused	
Group 3	LINK 9	Working uplink	SFP+/SFP
	LINK 10	Service port	SFP+/SFP
	LINK 11	Protection uplink	SFP+/SFP
	LINK 12	Unused	
Group 4	LINK 13	Working uplink	SFP+/SFP
	LINK 14	Service port	SFP+/SFP
	LINK 15	Protection uplink	SFP+/SFP
	LINK 16	Unused	

The figure below shows an MEX6200 with four APS groups marked with colors.

Figure 31: MEX6200 with Transponder Protection

3.2.4 Fiber Protection

When an Optical Switch module is installed, its input is connected to the output of the MUX/ DEMUX module, and its two outputs are connected internally to two COM* ports.

The Optical Switch performs APS based on the received optical power level of the incoming aggregated optical signal. Therefore, the Optical Switch can be used to protect against cable break, but not against uplink transceiver failure.

The facility protection ensures service continuity in case of a fiber break. The fiber protection based on the Optical Switch module is supported only for point-to-point topologies.

The following figure shows an Optical Switch Protection application.

Figure 32: Fiber Protection with Optical Switch

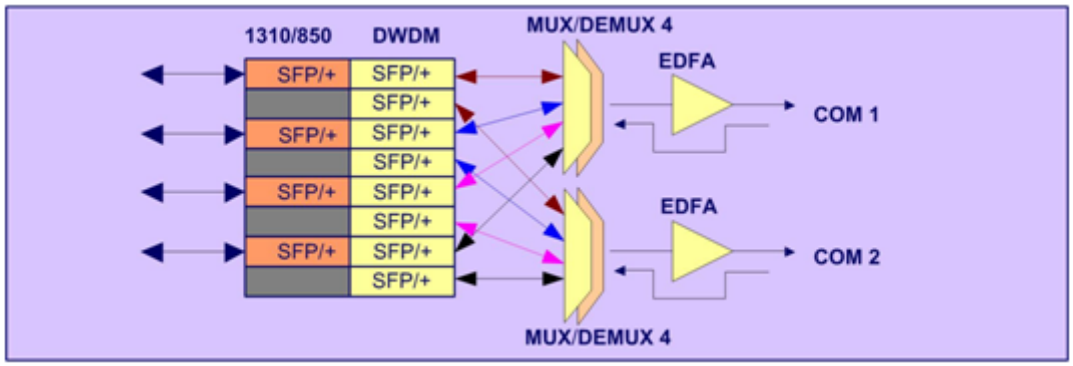

When an Optical Switch is installed, the COM1 and COM2* buttons are shown and enabled in the Web application. In this case, the protection is done on the entire optical signal, which includes all channels.

The following figure shows the front panel of the MEX6200 as displayed in the Web application.

Figure 33: MEX6200 with Optical Switch

*The COM2 port is currently out of use.

3.3 LEDs

3.3.1 TX6240/TX6280 LED Notifications

The system's LEDs are an important tool for hardware event notification and troubleshooting. Mellanox systems have two types of LEDs:

- Status LEDs
- Port LEDs

The Status LEDs are located to the left side of the front panel and on the power side at the far right. The port LEDs are located on top of the data ports- see Section 3.3.

Table 23 - Status LEDs

Symbol	Name	Description	Normal Conditions
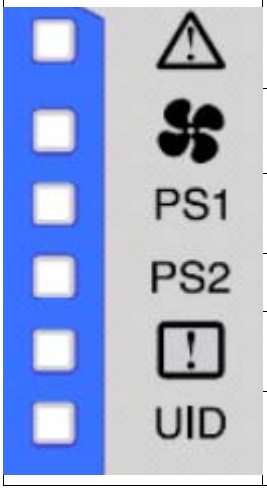	System Status LED	Shows the health of the system	Green
	Fan Status LED	Shows the health of the fans	Green
	Power supply #1	Shows the health of the right side power supply unit	Green
	Power supply #2	Shows the health of the left side power supply unit	Green
	Bad Port LED	lights up when a symbol error is detected on one of the ports.	Off
	Unit Identifier LED	Lights up on command through the CLI	Off

3.3.1.1 System Status LED

Figure 34: System Status LEDs - Front and Rear sides

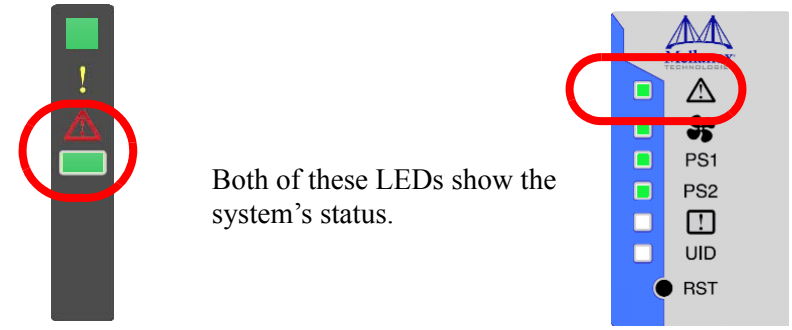

Both of the System Status LEDs (front and back) supply identical information.

It may take up to five minutes to turn on the system. If the System Status LED shows red after five minutes, unplug the system and call your Mellanox representative for assistance.

Table 24 - System Status LED Assignments

LED Behavior	Description	Action Required
Solid Green	The system is up and running (normal condition).	N/A
Flashing Green	The system is booting up. This assignment is valid on managed systems only.	Wait up to five minutes for the end of the booting process.
Solid Red	Major Error has occurred. For example, corrupted firmware, system is overheated etc.	If the System Status LED shows red five minutes after starting the system, unplug the system and call your Mellanox representative for assistance.
Off	The system has no power.	Check the power source and cable.

3.3.1.2 Fan Status LED

All fans must be operating while the power supply is plugged in.

Figure 35: Fan Status LED - Front and Rear sides

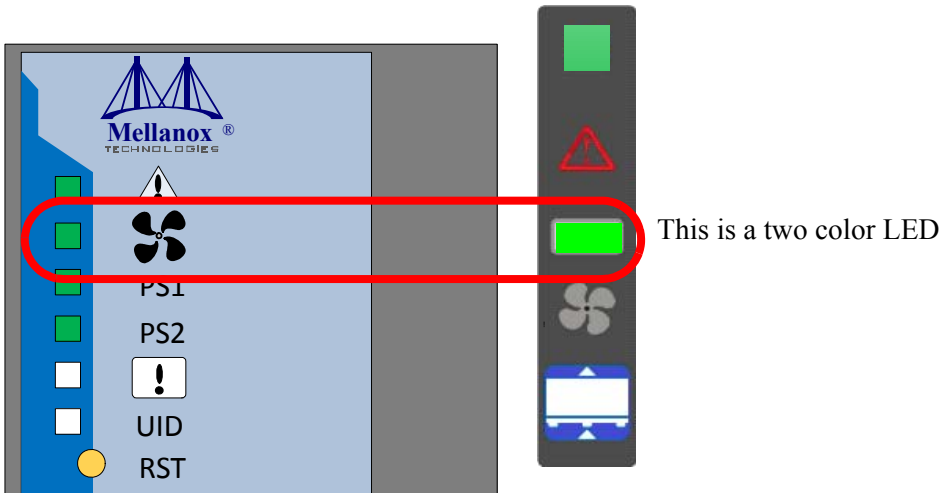

Table 25 - Fan Status LED Assignments

LED Behavior	Description	Action Required
Solid Green	All fans are up and running (normal condition).	N/A
Solid Red	Error, one or more fans is not operating properly.	In case there is an FRU, the module should be replaced. Otherwise, the system should be replaced.
Off	The fan unit is not receiving any power.	Check that the fan unit is properly and completely inserted.

Risk of Electric Shock!
With the fan module removed power pins are accessible within the module cavity.
DO NOT insert tools or body parts into the fan module cavity.

3.3.1.3 Power Supply Status LEDs

Figure 36: Power Status LED

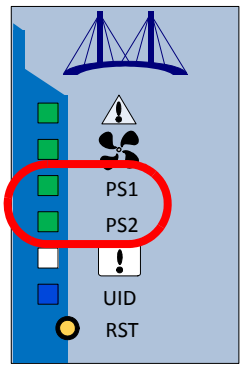

There are two power supply inlets in the system (for redundancy). The system can operate with only one power supply connected. In case the power supply is an FRU, a second power supply unit can be added to support hot-swap ability. Each power supply unit has a single 2 color LED on the right side of the unit, that indicates the status of the unit.

Figure 37: Rear Side Panel

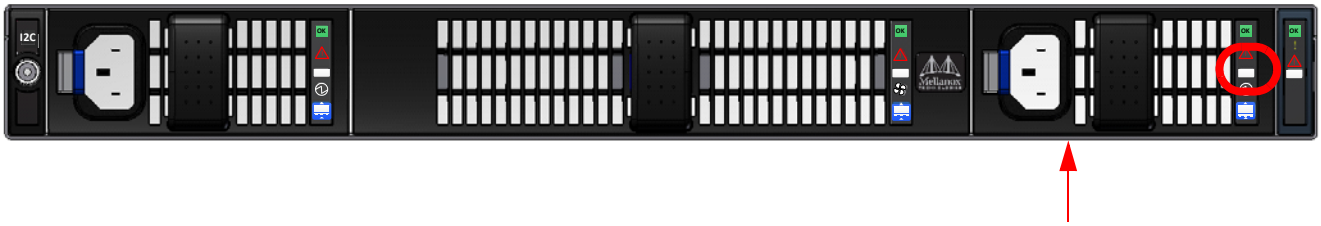

The primary power supply (PS) unit is located on the left side and the secondary unit is located on the right side.

Table 26 - Power Supply Unit Status LED Assignments

LED Behavior	Description	Action Required
Solid Green	The Power supply is running in normal condition.	N/A
Solid Red	Error, the unit is not operational.	In case there is an FRU, the module should be replaced. Otherwise, the system should be replaced.
Off	There is no power to the system, the unit is receiving no power.	Check power source or replace the cable.

3.3.1.4 Bad Port LED

The Bad Port LED indicator is used to indicate symbol errors in one or more system ports.

Table 27 shows the bad port status LED assignment.

Table 27 - Bad Port LED Assignments

LED Configuration	Description	Action Required
Off	No symbol errors have been received in last few seconds (normal condition)	N/A
Flashing Orange	Error, one or more ports have received symbol errors. Possible causes are: • Bad cable • Bad connection • Bad connector	Check symbol error counters on the system UI to identify the ports. Replace the cable on these ports.

3.3.1.5 UID LED

The UID LED is a debug feature, that upon user configuration, lights a blue LED for ease in finding a particular system within a cluster. This is a future feature that is not yet available.

3.3.1.6 Port LEDs

Figure 38: Port LEDs

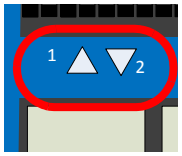

Table 28 - Port LEDs in Ethernet System Mode

LED Behavior	Description	Action Required
Off	Physical link is down.	Check the cable
Solid Green	Physical link is up with no traffic.	N/A
Flashing Green	Physical link is up with traffic.	N/A
Flashing Orange	Physical errors.	Check the cable

Table 29 - Port LEDs in InfiniBand System Mode

LED Behavior	Description	Action Required
Off	Physical link is down.	Check the cable
Solid Green	Logical link is up.	N/A
Flashing Green	Data activity flashing speed is proportional to data transfer speed.	N/A
Solid Orange	Physical link is up.	Wait for the Logical link to raise. Check that the SM is up.
Flashing Orange	A problem with the physical link.	Check that the SM is up.

3.3.2 MEX6200 LED Notifications

Table 30 - MEX6200 LEDs

Category	LED	LED Behavior	Description
System Status LEDs	PWR	Green blinking	Power-up stage
		Green	Normal operation
	CRT	OFF	No Critical alarm detected
		Red	Critical alarm detected
	MAJ	OFF	No Major alarm detected
		Red	Major alarm detected
	MIN	OFF	No Minor alarm detected
		Red	Minor alarm detected
LINK Port LEDs	LINK 1to LINK 16	OFF	Admin Down
		Blinking	Facility loopback or PRBS test
		Green	Normal operation
		Red	Alarm detected
MNG Port LEDs	MNG1 and MNG2	OFF	Admin Down
		Green	Normal operation
		Red	Alarm detected
COM/Amplifier LEDs	E1 and E2 (in a configuration with two EDFA modules or with an Optical Switch)	OFF	Admin Down No EDFA module or Optical Switch installed.
		Green	The corresponding amplifier module or Optical Switch port is operational (DWDM applications only).
		Red	Failure detected on the corresponding amplifier module or Optical Switch port.
ETH Port LEDs	LINK	Green:	Normal operation
		OFF	Port is disconnected
	ACT		Yellow blinking: Transmit and/or receive activity detected on the port
PSU LEDs	PWR	OFF	PSU is not installed
		Green	Normal operation
		Red	PSU failure detected

3.4 Inventory Pull-out Tab

The system's inventory parameters (such as serial number, part number, GUID and MAC address) can be extracted from the Inventory pull-out tab on the lower right side of the front panel.

Figure 39: Pull-out Tab

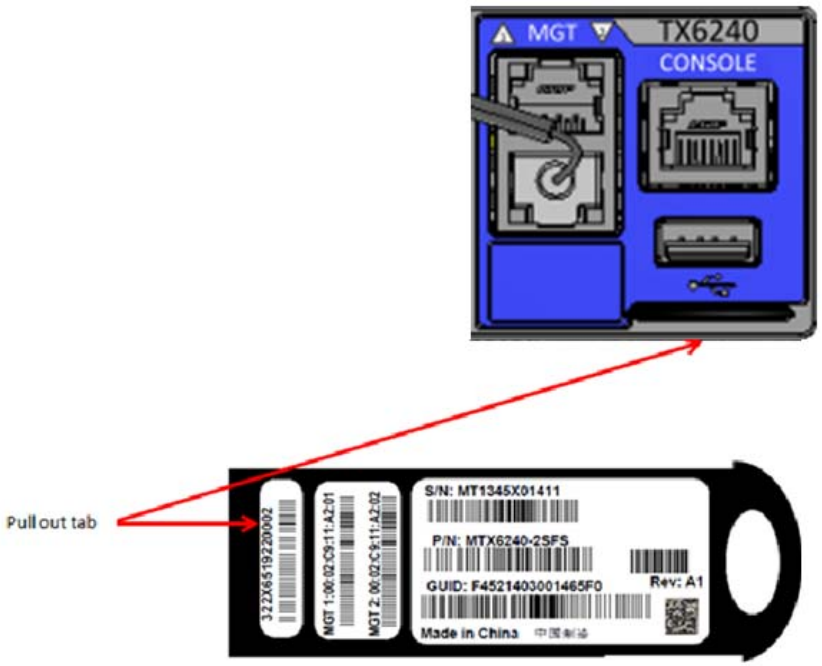

4 Software Management

Managed systems come with an embedded management CPU card that runs MLNX-OS® management software.

The MLNX-OS systems management package and related documentation can be downloaded via the product page:
http://www.mellanox.com/page/mlnx_os.

4.1 Upgrading Software

Software and firmware updates are available from the Mellanox Support website. Check that your current revision is the same one that is on the Mellanox website. If not upgrade your software. Copy the update to a known location on a Remote server within the user's LAN.

Use the CLI or the GUI in order to perform software upgrades. For further information please refer to the MLNX-OS Software User Manual section Upgrading MLNX-OS® Software.

Be sure to read and follow all of the instructions regarding the updating of the software on your system.

Managed systems do not require Firmware updating. Firmware updating is done through the MLNX-OS management software. The system comes standard with a management software module for system management called Mellanox Operating System (MLNX-OS). MLNX-OS® is installed on all SwitchX®-2 based managed systems. MLNX-OS® includes a CLI, WebUI, SNMP, system management software and IB management software (OpenSM).

The Ethernet ports for remote management connect to Ethernet systems. These systems must be configured to 100Mb/1 Gb auto-negotiation.

5 Troubleshooting

5.1 TX6240/TX6280 Troubleshooting Instructions

Table 31 - Long Haul Troubleshooting

Problem Indicator	Symptoms	Corrective Measures
LEDs	System Status LED is blinking for more than 5 minutes	This state means that the MLNX-OS software did not boot properly and only firmware is running. To overcome it, connect to the system via the console port, and check the software status. You might need to contact an FAE if the MLNX-OS software did not load properly
	System Status LED is red	This state can indicate a number of problems: • Critical system fault (CPU error, bad firmware) • Over Temperature To overcome it: • Check Environmental conditions (room temperature)
	Fan Status LED is red	This state is indicative of a problem with the FAN. • Check that the FAN is fully inserted and nothing blocks the airflow. • Replace the FAN FRU if needed.
	PSU Status LED is red	This state is indicative of a problem with the PSU. • Check/replace the power cable. • Replace the PSU if needed.
	The activity LED does not light up (InfiniBand):	Make sure that there is an SM running in the fabric.

Table 31 - Long Haul Troubleshooting

Problem Indicator	Symptoms	Corrective Measures
System boot failure	The last software upgrade failed on PPC based systems	• Make sure that there is an SM running in the fabric. • Connect the RS232 connector (CONSOLE) to a laptop. • Push the reset button on the system or on the management module. • You will have ~ 5 seconds to stop the U-Boot by pressing Control-B. • Choose the image you wish to upload. Use image 1 or image 2 only. • Select the previous image to boot. U-Boot 2009.01-mlnx1.4 (<date>) CPU: AMCC PowerPC 460EX Rev. A at 1000 MHz (PLB=200, OPB=100, EBC=100 MHz) Security/Kasumi support Bootstrap Option H - Boot ROM Location I2C (Addr 0x52) Internal PCI arbiter disabled 32 kB I-Cache 32 kB D-Cache Board: Mellanox PPC460EX Board FDEF: No I2C: ready DRAM: 2 GB (ECC enabled, 400 MHz, CL3) FLASH: 16 MB NAND: 1024 MiB PCI: Bus Dev VenId DevId Class Int PCIE0: link is not up. PCIE1: successfully set as root-complex 01 00 15b3 bd34 0c06 00 Net: ppc_4xx_eth0, ppc_4xx_eth1 Hit Ctrl+B to stop autoboot: 0 Mellanox MLNX-OS Boot Menu: 1. SX_PPC_M460EX 3.3.5006-dev-HA 2013-04-10 12:02:49 ppc 2. SX_PPC_M460EX 3.3.5006-dev-HA 2013-04-11 14:05:39 ppc 3. U-Boot prompt Choice:

5.2 MEX6200 Troubleshooting Instructions

Table 32 - MEX6200 Troubleshooting

Problem Indicator	Symptoms	Corrective Measures
Power On	MEX6200 does not turn on	No power: • Check that the power cable is properly connected to the MEX6200 power connector. • Check that both ends of the power cable are properly connected. • Check that power is available at the power outlet serving the MEX6200. Defective power supply: • Replace the power supply unit if needed. Defective MEX6200: • If all previous steps were unsuccessful, replace the MEX6200.

Table 32 - MEX6200 Troubleshooting

Problem Indicator	Symptoms	Corrective Measures
LEDs	The LOS LED of a device connected to MEX6200 is lit.	Cable connection problems: • Check all cables at the MEX6200 LINK Tx and Rx port connectors. • Repeat the check at the remote equipment. • Make sure that the SFP/SFP+ used matches the fiber type (single mode/multi-mode). Fiber problem: • Use a short fiber to connect the remote equipment Rx connector to its Tx. • If the problem is solved, connect the Rx connector of the fiber to the Tx connector at the MEX6200 location. • If the problem persists, replace the fiber. Defective remote equipment: • Use a short fiber to connect the remote equipment Rx connector to its Tx. If the LOS LED is still lit, the remote equipment is defective. A problem with the MEX6200 port state: • Set the Admin Status of the MEX6200 uplink port to Up Loss of Propagation: • Disable the LOS Propagation for this port. If the problem is solved, the reason for the LOS alarm is a loss on the port mate. Defective SFP/SFP+ module • Check for SFP/SFP+ alarms. • If there are alarms, replace the SFP/SFP+ module. Defective MEX6200: • Use a short fiber to connect the MEX6200 Rx connector to its Tx connector. (A signal generator may be required as the MEX6200 does not generate signals by itself.) • If the LOS LED is still lit, replace the MEX6200.
	The LINK LED of the local MEX6200 port is red.	Cable connection problems: • Check for proper connections of the cables to the MEX6200 LINK Tx and Rx connector. • Repeat the check at the remote equipment. Loss Propagation: • Disable the LOS Propagation for this port. • If the problem is solved, the reason for the LOS alarm is a loss on the port mate. High Signal Level: • Check the Receiver Input Power. • If the power is too high, add an attenuator. Defective SFP/SFP+ module: • Check for SFP/SFP+ alarms. • If there alarms, replace the SFP/SFP+ module. Fiber problem: • Check the Receiver Input Power • If the power is too low, replace the fiber. Defective remote equipment: • Use a different remote unit. • If the problem is solved, replace the remote unit.
	The system LED is red.	Defective MEX6200: • Check the MEX6200 alarms. • If there are alarms, replace the MEX6200.

Table 32 - MEX6200 Troubleshooting

Problem Indicator	Symptoms	Corrective Measures
No communication	The equipment attached to the LAN port of the local MEX6200 cannot communicate with the remote MEX6200 over the WAN.	Problem with the connection to the LAN: • Check that the LINK LED of the corresponding LAN port lights. If not, check that the cable to the LAN port is properly connected. • Check that the Admin Status of the MNG port is Up and that it is operating properly. • Check that the IP information of the remote MEX6200 is configured correctly (for example, the default gateway). External problem: • Check the IP configuration of the external equipment (for example, the gateway address) that is connected to the local MEX6200 LAN port. Defective MEX6200: • Replace the MEX6200.

6 Specifications

6.1 TX6240 System- Standalone

Table 33 - TX6240 Specifications

Feature	Value
Mechanical	**Size:** 1.71” H x 16.85” W x24.75” D 43.6mm X 427.5mm X 628.9 mm
	Mounting: 19” rack mount
	Weight: 2units
	Speed: up to FDR10 in the uplink ports and FDR in the downlink ports.
	Connector cage: 4 QSFP+ (2 uplinks, 2 downlinks)
	Air flow: 62 CFM
	Heat dissipation: 642 BTUs/hr
Environmental	**Temperature:** Operational: 0° to 45°C Non-Operational: -40° to 70°C
	Humidity: Operational: 10% - 85% non-condensing Non-Operational: 10% - 90% non-condensing
	Altitude: Operational: 3050m
Power	**Input Voltage:** 100 - 240 VAC 50-60Hz
CPU and Switch	**CPU:** PPC460EX
	Switch: Mellanox SwitchX®-2
Switching	**Capacity:** 80 Gb/s non-blocking

6.2 TX6280 System - Standalone

Table 34 - TX6280 Specifications

Feature	Value
Mechanical	**Size:** 1.71” H x 16.85” W x24.75” D 43.6mm X 427.5mm X 628.9 mm
	Mounting: 19” rack mount
	Weight:
	Speed: up to FDR10 in the uplink port and FDR in the downlink port.
	Connector cage: 2 QSFP+ (1 uplink, 1 downlink)
	Air flow: 62 CFM
	Heat dissipation: 642 BTUs/hr
Environmental	**Temperature:** Operational: 0° to 45°C Non-Operational: -40° to 70°C
	Humidity: Operational: 10% - 85% non-condensing Non-Operational: 10% - 90% non-condensing
	Altitude: Operational: 3050m
Power	**Input Voltage:** 100 - 240 VAC 50-60Hz
	Module Power Consumption (on active optical cables/modules): Maximum: 3W (uplink) 2.5W(downlink)
CPU and Switch	**CPU:** PPC460EX
	Switch: Mellanox SwitchX®-2
Switching	**Capacity:** 40 Gb/s non-blocking

6.3 MEX6200 WDM Unit

Table 35 - MEX6200 Specifications

Feature	Value
Mechanical	**Size:** 1.733" (H) x 9.05" (W) x 17.32" (D), 44mm (H) x 230mm (W) x 440mm (D)
	Mounting: side by side for 19" rack mount 19", 23", ETSI rack mountable.
	Weight: 2 PSUs: 7kg
	Speed: 10Gb/s per port
	Connector cage: 16 SFP+ ,2 SFP+
	Air flow: 23 CFM
	Heat dissipation: 290BTUs/hr
Environmental	**Temperature:** Operational: 0° to 45°C Non-Operational: -40° to 70°C
	Humidity: Operational: 10% - 85% non-condensing Non-Operational: 10% - 90% non-condensing
	Altitude: Operational: 3050m
Power	**Input Voltage:** 100 - 240 VAC 50-60Hz
CPU	CPU: MPC8314 PowerQUICC_ II

Appendix A: Accessory and Replacement Parts

Table 36 - OPNs for Replacement Parts

OPN	Part Description
HAR000028	Harness RS232 2M cable – DB9 to RJ-45 (for managed switches only)
ACC000501	Power cord Type C13-C14
MEX62-P	MEX6200 FRU power supply - AC power supply
MEX62-F	MEX6200 FRU FAN UNIT FOR METROX BUNDLE
MEX62-SKIT	Rack installation kit for MEX6200 series short depth 1U systems to be mounted into standard depth racks
MTX6240-2SFS	MetroX™ 40km long haul 40G FRU system, 2 long-haul QSFP+ ports, 2 Power Supplies, Standard depth, Managed, PSU side to connector side airflow, Rail Kit and RoHS6
MTX6280-2SFS	MetroX™ 80km long haul 40G FRU system, 2 long-haul QSFP+ ports, 2 Power Supplies, Standard depth, Managed, PSU side to connector side airflow, Rail Kit and RoHS6
MEX6240-2B	40km WDM FRU box part of TX6240, LC colored connector, 2 Power Supplies, Short depth, Managed, Rail Kit and RoHS6
MEX6280-2B	80km WDM FRU box part of TX6280, LC colored connector, 2 Power Supplies, Short depth, Managed, Rail Kit and RoHS6
MEX62-RBN	MEX62-RBN Mellanox® passive ribbon fiber hybrid cable, MPO to 8xLC, 0.5m

Appendix B: Thermal Threshold Definitions

There are three thermal threshold definitions for the SwitchX® switch device which impact the overall switch system operation state: Warning, Critical and Emergency.

1.Warning – 105C

On managed systems only: When the SwitchX® device crosses the 100C threshold, a Warning Threshold message will be issued by the MLNX-OS management SW, indicating to system administration that the switch has crossed the Warning threshold.

Note that this temperature threshold does not require nor lead to any action by hardware (such as switch shutdown).

2.Critical – 120C

When the SwitchX® device crosses this temperature, the firmware will automatically shut down the device.

3.Emergency – 130C

In case the firmware fails to shut down the SwitchX® device upon crossing the Critical threshold, the SwitchX® device will auto-shutdown upon crossing the Emergency (130C) threshold.

Appendix C: Interface Specifications

C.1 QSFP Interface

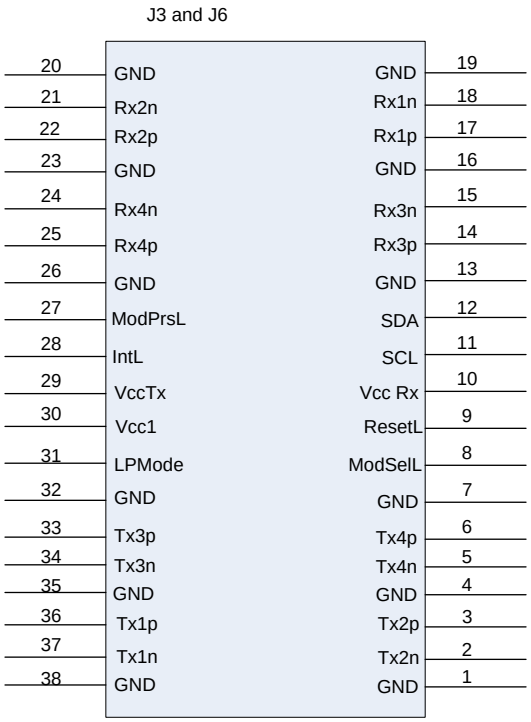

Connector Pin Number	Connector Pin Name	Signal Description
1	GND	Ground
2	Tx2n	Transmitter Inverted Data Input
3	Tx2p	Transmitter Non-Inverted Data Input
4	GND	Ground
5	Tx4n	Transmitter Inverted Data Input
6	Tx4p	Transmitter Non-Inverted Data Input
7	GND	Ground
8	ModSelL	Module Select
9	ResetL	Module Reset
10	Vcc Rx	+3.3 V Power supply receiver
11	SCL	2-wire serial interface clock
12	SDA	2-wire serial interface data
13	GND	Ground
14	Rx3p	Receiver Non-Inverted Data Output
15	Rx3n	Receiver Inverted Data Output
16	GND	Ground
17	Rx1p	Receiver Non-Inverted Data Output
18	Rx1n	Receiver Inverted Data Output
19	GND	Ground
20	GND	Ground
21	Rx2n	Receiver Inverted Data Output 3
22	Rx2p	Receiver Non-Inverted Data Output 3
23	GND	Ground
24	Rx4n	Receiver Inverted Data Output 3
25	Rx4p	Receiver Non-Inverted Data Output 3
26	GND	Ground
27	ModPrsL	Module Present
28	IntL	Interrupt
29	Vcc Tx	+3.3 V Power supply transmitter
30	Vcc 1	+3.3 V Power Supply
31	LPMode	Low Power Mode
32	GND	Ground
33	Tx3p	Transmitter Non-Inverted Data Input
34	Tx3n	Transmitter Inverted Data Input
35	GND	Ground
36	Tx1p	Transmitter Non-Inverted Data Input
37	Tx1n	Transmitter Inverted Data Input

Figure 40: QSFP Connector Male and Female Views

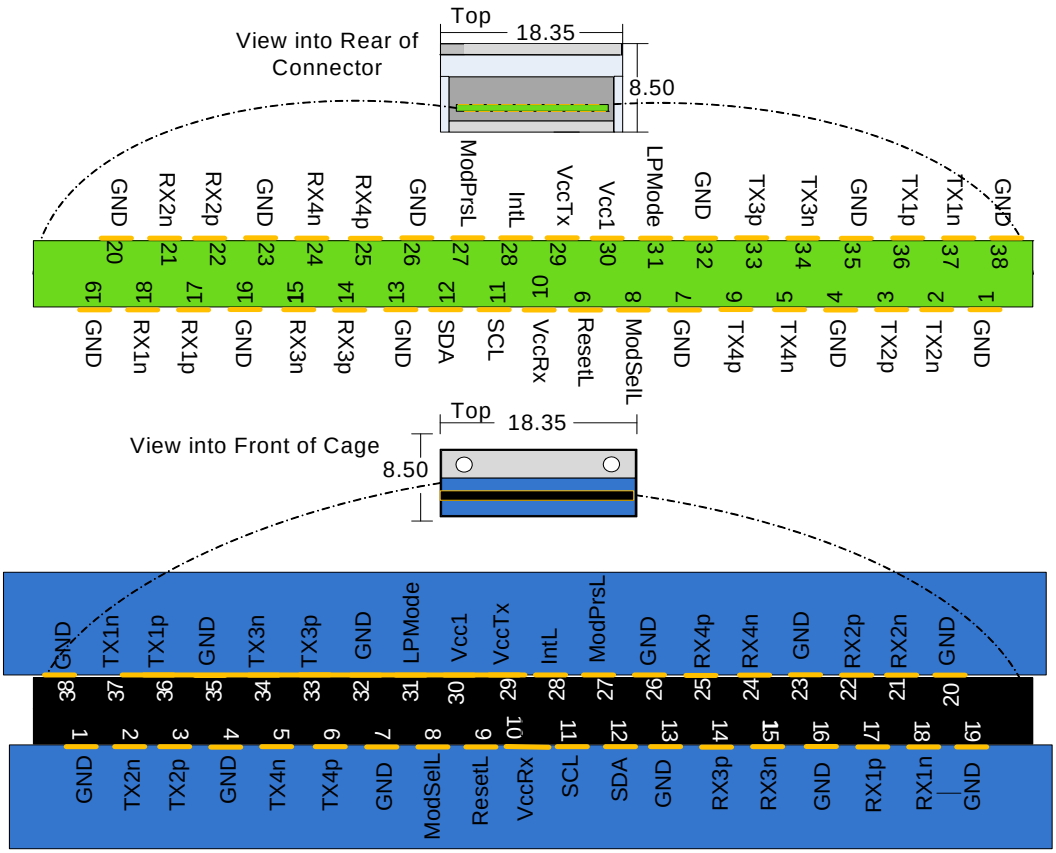
Top
View into Rear of Connector
18.35
8.50
GND RX2n RX2p GND RX4n RX4p GND ModPrsL IntL VccTx Vcc1 LPMode GND TX3p TX3n GND TX1p TX1n GND
20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38
19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
GND RX1n RX1p GND RX3n RX3p GND SDA SCL VccRx ResetL ModSelL GND TX4p TX4n GND TX2p TX2n GND
Top
View into Front of Cage
18.35
8.50
GND TX1n TX1p GND TX3n TX3p GND LPMode Vcc1 VccTx IntL ModPrsL GND RX4p RX4n GND RX2p RX2n GND
38 37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19
GND TX2n TX2p GND TX4n TX4p GND ModSelL ResetL VccRx SCL SDA GND RX3p RX3n GND RX1p RX1n GND

C.2 RJ-45 CONSOLE and I2C Interface

The RJ-45 CONSOLE and I2C interface uses the EIA 568A standard wiring color coding.

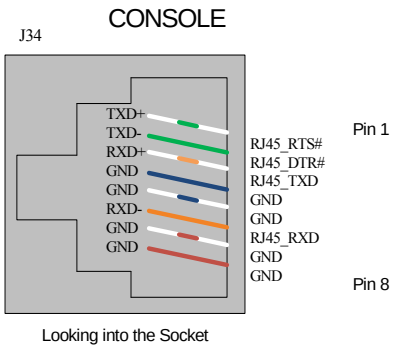

Table 37 - RJ-45 CONSOLE Pinout

Connection	Signal	Pin#	Color
TXD+	RJ-45_RTS#	1	G/W
TXD-	RJ-45_DTR#	2	G
RXD+	RJ-45_TXD	3	O/W
GND	GND	4	Bl
GND	GND	5	Bl/W
RXD-	RJ-45_RXD	6	O
GND	GND	7	Br/W
GND	GND	8	Br

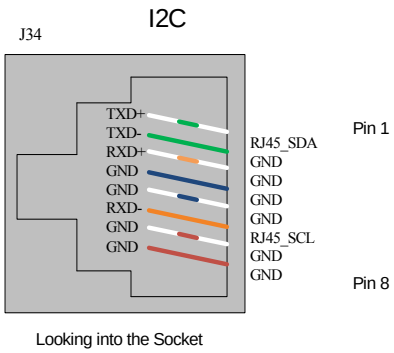

Table 38 - RJ-45 I2C Pinout

Connection	Signal	Pin#	Color
TXD+	RJ-45_SDA	1	G/W
TXD-	GND	2	G
RXD+	GND	3	O/W
GND	GND	4	Bl
GND	GND	5	Bl/W
RXD-	RJ-45_SCL	6	O
GND	GND	7	Br/W
GND	GND	8	Br

C.3 RJ45 to DB9 Harness Pinout

In order to connect a host PC to the Console RJ45 port of the system, a RS232 harness cable (DB9 to RJ45) is supplied.

Figure 41: RJ45 to DB9 Harness Pinout

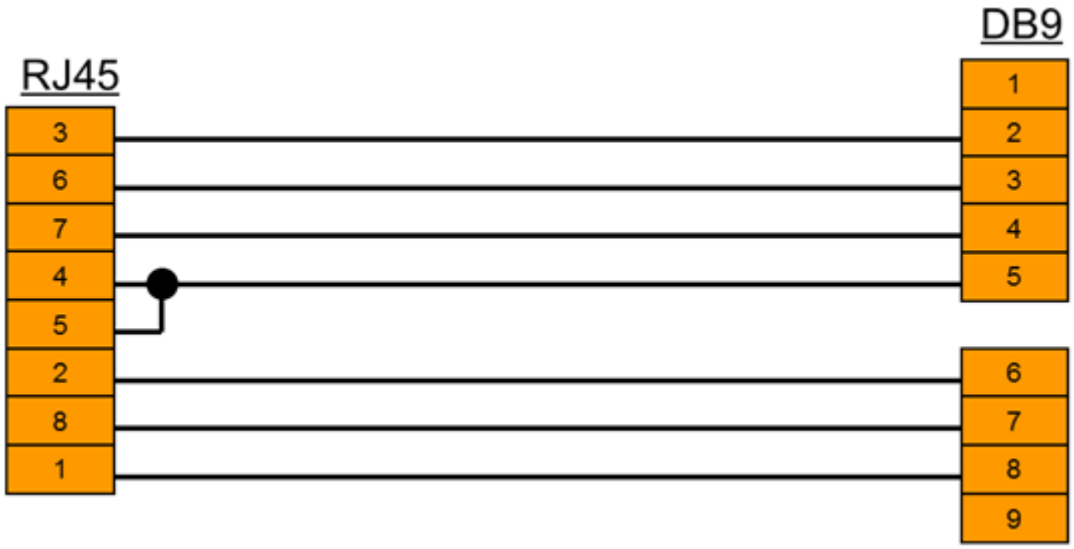

Appendix D: Disassembly and Disposal

D.1 Disassembly Procedure

➢ ***To disassemble the system from the rack:***

1. Unplug and remove all connectors.
2. Unplug all power cords.
3. Remove the ground wire.
4. Unscrew the center bolts from the side of the system with the bracket.

Support the weight of the system when you remove the screws so that the system does not fall.

5. Slide the system from the rack.
6. Remove the rail slides from the rack.
7. Remove the caged nuts.

D.2 Disposal

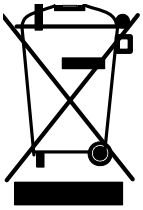

According to the WEEE Directive 2002/96/EC, all waste electrical and electronic equipment (EEE) should be collected separately and not disposed of with regular household waste.

Dispose of this product and all of its parts in a responsible and environmentally friendly way.

Follow the instructions found at http://www.mellanox.com/page/dismantling_procedures for proper disassembly and disposal of the switch, according to the WEEE directive.

Appendix E: Safety Warnings (Multiple Languages)

E.1 Nordic Countries Notices

In Finland: "Laite on liitettävä suojakoskettimilla varustettuun pistorasiaan"
In Norway: "Apparatet må tilkoples jordet stikkontakt"
In Sweden: "Apparaten skall anslutas till jordat uttag"

E.2 Installation Safety Warnings (English)

1. **Installation Instructions**

Read all installation instructions before connecting the equipment to the power source.

2. **Bodily Injury Due to Weight**

Use enough people to safely lift this product.

3. **Heavy Equipment**

This equipment is heavy and should be moved using a mechanical lift to avoid injuries.

4. **Risk of Electric Shock!**

Risk of Electric Shock!
With the fan module removed power pins are accessible within the module cavity.
DO NOT insert tools or body parts into the fan module cavity.

5. **Over-temperature**

This equipment should not be operated in an area with an ambient temperature exceeding the maximum recommended: 45°C (113°F). Moreover, to guarantee proper , allow at least 8cm (3 inches) of clearance around the ventilation openings.

6. Stacking the Chassis

The chassis should not be stacked on any other equipment. If the chassis falls, it can cause bodily injury and equipment damage.

7. Redundant Power Supply Connection - Electrical Hazard

This product includes a redundant power or a blank in its place. In case of a blank power supply, do not operate the product with the blank cover removed or not securely fastened.

8. Multiple Power Inlets

Risk of electric shock and energy hazard.
The PSUs are all independent.
Disconnect all power supplies to ensure a powered down state inside of the switch platform.

9. During Lightning - Electrical Hazard

During periods of lightning activity, do not work on the equipment or connect or disconnect cables.

10. Copper InfiniBand Cable Connecting/Disconnecting

Copper InfiniBand cables are heavy and not flexible, as such they should be carefully attached to or detached from the connectors. Refer to the cable manufacturer for special warnings/instructions.

11. Rack Mounting and Servicing

When this product is mounted or serviced in a rack, special precautions must be taken to ensure that the system remains stable. In general you should fill the rack with equipment starting from the bottom to the top.

12. Equipment Installation

This equipment should be installed, replaced, and/or serviced only by trained and qualified personnel.

13. Equipment Disposal

Disposal of this equipment should be in accordance to all national laws and regulations.

14. Local and National Electrical Codes

This equipment should be installed in compliance with local and national electrical codes.

15. UL Listed and CSA Certified Power Supply Cord

For North American power connection, select a power supply cord that is UL Listed and CSA Certified, 3 - conductor, [16 AWG], terminated with a molded plug rated at 125 V, [13 A], with a minimum length of 1.5m [six feet] but no longer than 4.5m.
For European connection, select a power supply cord that is internationally harmonized and marked "<HAR>", 3 - conductor, minimum 1.0 mm^2 wire, rated at 300 V, with a PVC insulated jacket. The cord must have a molded plug rated at 250 V, 10 A.

16. Installation codes

This device must be installed according to the latest version of the country national electrical codes. For North America, equipment must be installed in accordance to the applicable requirements in the US National Electrical Code and the Canadian Electrical Code.

17. Interconnection Of Units

Cables for connecting to the unit RS232 and Ethernet Interfaces must be UL certified type DP-1 or DP-2. (Note- when residing in non LPS circuit)

18. Overcurrent Protection

A readily accessible Listed branch circuit overcurrent protective device rated 20 A must be incorporated in the building wiring.

19. Do Not Use the Switch as a Shelf or Work Space

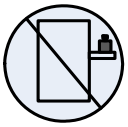

Caution: Slide/rail mounted equipment is not to be used as a shelf or a work space. The rails are not intended for sliding the unit away from the rack. It is for permanent installation at final resting place only, not used for service and maintenance

20. WEEE Directive

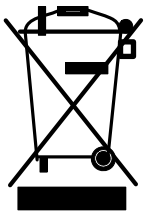

According to the WEEE Directive 2002/96/EC, all waste electrical and electronic equipment (EEE) should be collected separately and not disposed of with regular household waste.

Dispose of this product and all of its parts in a responsible and environmentally friendly way.

21. Country of Norway Power Restrictions

This unit is intended for connection to a TN power system and an IT power system of Norway only.

E.3 אזהרות בטיחות בהתקנה (עברית)

1. הוראות התקנה

קרא היטב את כל הוראות ההתקנה לפני חיבור המוצר לחשמל.

2. תקן ישראלי

יש להתקין את המוצר תוך הקפדה על תקנות החשמל הנהוגות בישראל, ולעשות שימוש ביחידת חלוקת כוח העומדת בתקן ישראלי (ת"י) 32.

3. חבלת גוף כתוצאה מנשיאת משקל יתר

נדרשת נוכחותם של מספר מתקינים כדי להרים את המוצר בבטחה.

4. ציוד כבד

המוצר כבד ויש לשנעו באמצעות מעלית מכאנית כדי למנוע חבלה.

5. סכנת התחשמלות!

סכנת התחשמלות!

בעת שיחידת המאוורר מפורקת, רכיבי חשמל נחשפים בחלל הריק. אין להחדיר כלים או איברי גוף לחלל המיועד להרכבת היחידה.

6. התחממות יתר

אין להפעיל את המוצר באיזור שבו טמפרטורת החדר עולה על הטמפרטורה המקסימלית המומלצת: 45°C (113°F).

בנוסף, כדי להבטיח כניסת אוויר תקינה, יש לוודא כי קיים שטח פנוי של 8 ס"מ (3 אינץ') לפחות סביב פתחי האיוורור.

7. ערימת המערכת

אין לערום את המערכת על גבי ציוד אחר. במקרה של נפילה, עשויים להגרם נזקי גוף ורכוש.

8. חיבור ספק כוח נוסף -סכנת חשמל

.

המערכת מכילה ספק כוח נוסף לגיבוי או, בחלק מהמקרים, חלל ריק המאפשר הרכבת ספק כזה. אין לעשות שימוש במערכת כשהמכסה החוסם את החלל הריק אינו סגור כהלכה.

9. מספר שקעים חשמליים

סכנת התחשמלות ואזהרת אנרגיה.

כל אחד מספקי הכוח פועל באופן עצמאי. יש לנתק את כל ספקי הכוח כדי להבטיח ניתוק מוחלט של המערכת מזרם חשמלי.

10. בעת סופות ברקים - סכנת חשמל

בעת סופות ברקים, אין להפעיל את המערכת או לחבר/לנתק כבלים.

11. חיבור או ניתוק של כבלי אינפיניבאנד מנחושת

כבלי InfiniBand מנחושת הם כבדים וקשיחים.

לפיכך, יש לחברם ולנתקם מהמחברים בזהירות רבה. לאזהרות נוספות, יש לעיין בעלון לצרכן מטעם יצרן הכבלים.

12. הרכבה על גבי מדף בארון

כאשר מרכיבים מוצר זה על גבי מדף בארון, יש לנקוט באמצעי זהירות מיוחדים בכדי להבטיח שיוותר יציב. ככלל, יש למלא את מדפי הארון החל מהתחתון ועד לעליון.

13. התקנת המוצר

כל התקנה, החלפה או טיפול במוצר זה חייבת להתבצע על ידי איש צוות מיומן ומוסמך בלבד.

14. השלכת פסולת

השלכת המוצר בתום השימוש חייבת להיעשות בהתאם לכל התקנות והחוקים הלאומיים.

15. תקנות חשמל מקומיות ולאומיות

יש להתקין מערכת זו בהתאם לתקנות החשמל המקומיות והלאומיות.

16. כבל אספקת חשמל

על מנת לחבר את המוצר לחשמל בצפון אמריקה, יש לבחור כבל חשמלי מאושר UL ובעל הסמכת CSA, 3 - מוליך, AWG 16], שבקצהו תקע מובנה 125V 13A, אורכו המינימלי 1.5 מטר (6 אינץ') ואורכו המקסימלי 4.5 מטר.

לחיבור אירופאי, בחר כבל חשמלי בעל התאמה בינלאומית וסימון "<HAR>", 3 - מוליך, גידים פנימיים באורך מינימלי של 1.0 מילימטר^2, 300 V, עם עטיפת PVC מבודדת. על הכבל לכלול תקע מובנה 250 V, 10A.

17. תקנות התקנה

יש להתקין מערכת זו על פי הגרסה האחרונה של תקנות החשמל הלאומיות הנהוגות במדינה. עבור צפון אמריקה, יש להתקין את המערכת בהתאם לתקנות החשמל הלאומיות המיושמות בארה"ב ובקנדה.

18. חיבור בין מערכות

על כבלים לחיבור היחידה לממשקי RS232 ו-Ethernet להיות בעלי הסמכת UL מסוג DP-1 או DP-2 (כאשר הם מצויים במעגל חשמלי שאינו מקור כוח מוגבל).

19. הגנה מפני מתח גבוה

יש להקפיד על המצאותם בבניין ועל זמינותם של אמצעים להגנה מפני מתח גבוה בתקן 20A.

20. אין להשתמש במערכת כמדף או שטח עבודה

זהירות: אין להשתמש בציוד כמדף או שטח עבודה. המסילות לא נועדו לשליפת המערכת מהארון, אלא להתקנה במיקומו הקבוע והסופי של הארון.

21. תקנת WEEE

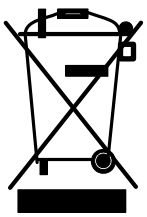

על פי תקנות WEEE 2002/96/EC, יש להשליך את כל פסולת הציוד החשמלי והאלקטרוני בנפרד מפסולת ביתית רגילה.

בתום השימוש, השלך לאשפה את המוצר הזה ואת כל חלקיו באופן אחראי וידידותי לסביבה.

22. מגבלות חשמליות בנורבגיה

יחידה זו מיועדת לחיבור למערכת אספקת חשמל מסוג TN וקמערכת אספקת חשמל מסוג IT, בנורבגיה בלבד.

E.4 安裝安全性警告 (Chinese)

1. 安裝指示

本設備附有備援電源供應器或在適當位置配有空白蓋板。

2. 因重量導致的人身受傷

為了安全起見，請安排足夠的人員以合力抬起本產品。

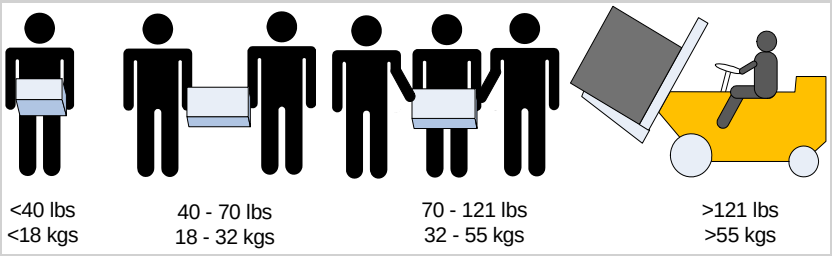

3. 重設備

本設備極重，應使用機械式起重機來搬移，以避免人員受傷。

4. 有觸電的危險

有觸電的危險！
拆除風扇模組後，即可接觸到模組空腔內的電源針腳。
請勿將工具或機身零件插入到風扇模組空腔內。

5. 溫度過高

本設備不應在超過所建議的最高環境溫度的區域中運作：45°C (113°F)。此外，為了保證氣流的流通正常，請在通風口旁保留至少 8 公分 (3 英吋) 的間距。

6. 堆疊機箱

機箱不應堆疊在任何其他設備上。如果機箱掉落，可能造成人員受傷與設備損壞。

7. 複式電源連接時的電擊危險

本設備附有備援電源供應器或在適當位置配有空白蓋板。如果是電源供應器空白蓋板，在空白蓋板已取下或未牢牢固訂的情況下，請勿操作本產品。

8. 多電源輸入座

電擊與能源危害的危險。
所有 PSU 均各自獨立。
將所有電源供應器斷電，確保交換器平台內部在電源關閉狀態。

9. 閃電時的電擊危險

在閃電期間，不要使用本設備或連接或拔下纜線。

10. InfiniBand 銅纜連接 / 拔下

InfiniBand 銅纜很重且沒有彈性，因此必須小心裝在連接器上或自連接器上拔下。如需相關的特殊警告 / 指示，請洽詢纜線製造商。

11. 機架安裝與維修

此產品已安裝在機架中或在機架中維修時，必須採取特定預防措施以確保系統維持穩定。一般您應該將設備從底部到頂端放滿機架。

12. 設備安裝

本設備僅限由經過訓練與 / 或合格的人員安裝、更換或維修。

13. 設備棄置

棄置本設備應遵照所有國內法規。

14. 當地與國家電氣法規

請遵照當地與國家電氣法規安裝本設備。

15. UL 列名和 CSA 認證電源線

北美地區在接上電源時，請選用獲得 UL 列名和 CSA 認證、三個導體、[16 AWG] 附成型插頭，額定值為 125 V、[13 A]，長度至少 1.5 公尺 [六英尺]，但不超過 4.5 公尺的電源線。

歐洲地區在接上電源時，請選用國際協調式且標示有 <HAR> 字樣、三個導體、標稱截面至少 1.0 平方公厘，額定值為 300 V，採用 PVC 絕緣的電源線。電源線需有成型插頭，額定值為 250 V, 10 A。

16. 高漏電流

警告：高漏電流；必須執行地線連接，然後再連接電源供應器。

17. 安裝法規

請務必遵循最新版的國家電氣法規，安裝本設備。在北美地區，請務必遵循美國國家電工法規和加拿大電工法規中的適用規定，安裝本設備。

18. 互連設備

連接至 RS232 設備和乙太網路介面的纜線必須是 UL 認證類型 DP-1 或 DP-2。(請注意位於非 LPS 電路時)

過電流保護：準備好使用的列名分支電路過電流保護裝置最大額定值 20 A 必須整合在配線中。

19. 切換開關不可用作機架或工作空間

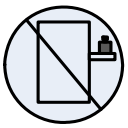

小心：滑軌 / 導軌安裝設備不可用作機架或工作空間。導軌不適用於將設備滑出機架使用。僅限永久安裝在最後安置區域時使用，不可用於維修和保養。

20. WEEE 指令

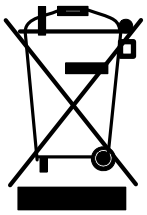

根據 WEEE 指令 2002/96/EC，所有廢棄的電氣與電子設備 (EEE)，應分開集中，而且不應與一般家庭廢棄物一起棄置。
請以負責和環保的方式棄置本產品及其所有零件。

21. 挪威國家電源限制

本設備僅限連接至挪威的 TN 電源系統和 IT 電源系統。

E.5 Avertissements de sécurité pour l'installation (French)

1. Instructions d'installation

Veuillez lire la totalité des instructions d'installation avant de relier l'équipement au secteur.

2. Blessures à cause du poids

Prévoyez assez de personnel pour soulever ce produit en toute sécurité.

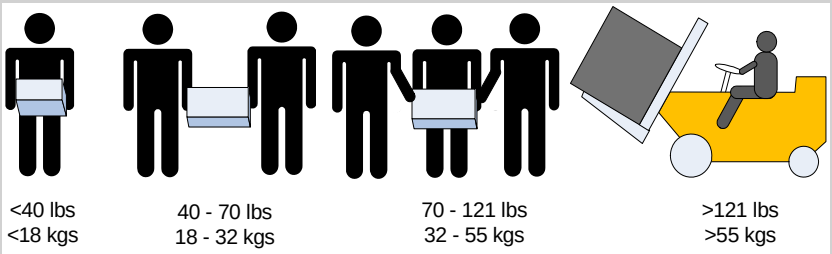

3. Équipement lourd

Cet équipement est lourd et doit être déplacé avec un système de levage mécanique pour éviter les blessures.

4. Danger d'électrocution

Danger d'électrocution !
Lorsque le module de ventilation est retiré, les broches d'alimentation sont exposées dans l'emplacement du module.
NE PAS insérer d'outils ou la main dans l'emplacement du module.

5. Surchauffe

Cet équipement ne doit pas être en service dans un local dont la température dépasse le maximum recommandé de 45°C (113°F). En outre et pour garantir une circulation d'air correcte, laisser un espace d'au moins 8 cm (3") autour des orifices de ventilation.

6. Châssis empilé sur d'autres équipements

Le châssis ne doit pas être empilé sur d'autres équipements. S'il tombe, il peut endommager l'équipement ou entraîner des blessures.

7. Connexion de l'alimentation redondante : danger d'électrocution

Ce produit est équipé d'une alimentation redondante ou d'un cache si elle est absente. Dans ce dernier cas, ne pas faire fonctionner le produit si le cache est retiré ou mal fixé.

8. Plusieurs prises d'alimentation

Risque et danger d'électrocution.
Les alimentations sont toutes indépendantes.
Pour s'assurer que le commutateur est bien hors tension, débranchez toutes les alimentations.

9. En cas d'orage, danger d'électrocution

Pendant un orage, ne pas travailler sur l'équipement ni brancher ou débrancher des câbles.

10. Connexion et déconnexion du câble InfiniBand en cuivre

Les câbles InfiniBand en cuivre sont lourds et peu flexibles. Par conséquent, il faut procéder avec soin pour les brancher ou les débrancher des connecteurs. Consulter le fabricant du câble pour obtenir des instructions ou des avertissements spécifiques.

11. Montage en rack et maintenance

Lors du montage ou de la maintenance de ce produit dans un rack, il faut faire spécialement attention pour s'assurer que l'ensemble reste stable. En règle générale, le rack doit être rempli en commençant par le bas.

12. Installation de l'équipement

Cet équipement ne doit être installé, remplacé et maintenu que par un personnel formé et qualifié.

13. Mise au rebut de l'équipement

La mise au rebut de cet équipement doit se faire conformément à toutes les lois et réglementations nationales.

14. Codes électriques locaux et nationaux

Cet équipement doit être installé conformément aux codes électriques locaux et nationaux.

15. Codes d'installation

Cet appareil doit être installé conformément à la version la plus récente des codes électrique nationaux. En Amérique du Nord, l'équipement doit être installé en respectant les exigences de l'US National Electrical Code et du Code canadien de l'électricité.

16. Cordon d'alimentation UL Listed et certifié CSA

Pour le branchement électrique en Amérique du Nord, utiliser un cordon d'alimentation UL Listed et CSA Certified, à 3 conducteurs [calibre 16 AWG], avec une prise moulée 125 V [13 A], faisant au moins 1,5 m de long [six pieds] et au plus 4,5 m.

Pour le branchement électrique en Europe, utiliser un cordon d'alimentation au format international harmonisé (marqué <HAR>), à 3 conducteurs d'au moins 1 mm2 de section, 300 V, avec une gaine isolante en PVC. Le cordon doit avoir une prise moulée 250 V 10 A.

17. Courant de fuite élevé

Avertissement : courant de fuite élevé, une connexion à la terre est indispensable avant de brancher l'alimentation.

18. Interconnexion des unités

Les câbles de connexion aux interfaces RS232 et Ethernet de l'appareil doivent être certifié UL de type DP-1 ou DP-2. (Note : en cas d'installation sur un circuit dont la puissance n'est pas limitée)

Protection contre les surintensités : le câblage de l'immeuble doit intégrer un dispositif certifié de protection contre les surintensités, calibré à 20 A et aisément accessible.

19. Ne pas utiliser comme étagère ou plan de travail

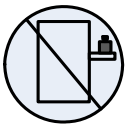

Attention : un équipement coulissant ou monté sur rail ne doit pas servir d'étagère ni de plan de travail. Les rails ne sont pas destinés à faire coulisser l'unité hors du rack. Ils sont destinés à une installation permanente à l'emplacement final, pas pour l'entretien ni la maintenance.

20. Directive DEEE

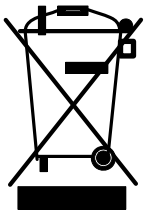

Selon la Directive 2002/96/CE (DEEE), tous les déchets d'équipements électriques et électroniques (EEE) doivent être collectés séparément et ne pas être mis au rebut avec les déchets ménagers habituels.

Ce produit et toutes ses pièces doivent être mis au rebut d'une manière responsable, respectant l'environnement.

21. Restrictions concernant l'alimentation pour la Norvège

Cet appareil est prévu pour être relié à un système d'alimentation TN et un système d'alimentation informatique de Norvège uniquement.

E.6 Installation Sicherheitshinweise(German)

1. Installationsanleitungen

Lesen Sie alle Installationsanleitungen, bevor Sie das Gerät an die Stromversorgung anschließen.

2. Verletzungsgefahr wegen des Gewichts

Um das Produkt sicher anzuheben, genügend Personen einsetzen.

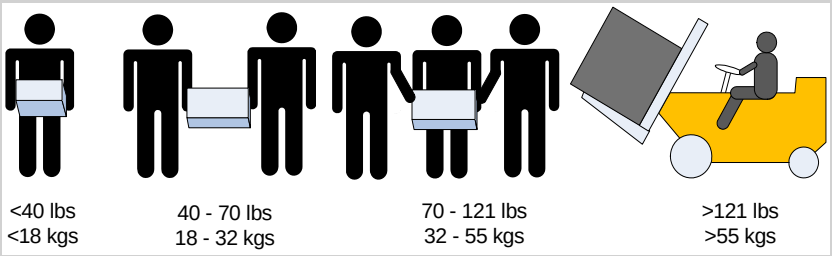

3. Schweres Gerät

Dieses Gerät ist schwer und muss mit einem mechanischen Hebegerät verschoben werden, um Verletzungen zu vermeiden.

4. Stromschlagrisiko

Stromschlagrisiko!
Bei abgenommenem Ventilatormodul sind die Stromkontakte in der Modulvertiefung zugänglich.
Es dürfen KEINE Werkzeuge oder Körperteile in die Vertiefung des Ventilatormoduls gelangen.

5. Übertemperatur

Dieses Gerät sollte nicht in einem Bereich mit einer Umgebungstemperatur über der maximal empfohlenen Temperatur von 45°C (113°F) betrieben werden. Es ist ein Luftstrom von 200 LFM bei maximaler Umgebungstemperatur erforderlich. Außerdem sollten mindestens 8 cm (3 in.) Freiraum um die Belüftungsöffnungen sein, um einen einwandfreien Luftstrom zu gewährleisten.

6. Stapeln des Chassis

Das Chassis sollte nicht auf andere Geräte gestapelt werden. Wenn das Chassis herunterfällt, kann es zu Verletzungen und Beschädigungen an Geräten führen.

7. Mehrere Stromeingänge

Risiko eines Stromschlags und Stomgefahr.
Alle Stromversorgungseinheiten sind unabhängig.
Trennen Sie alle Stomversorgungen, um einen abgeschalteten Zustand im Inneren der Switch-Plattform sicherzustellen.

8. Bei Gewitter - Elektrische Gefahr

Arbeiten Sie während eines Gewitters und Blitzschlag nicht am Gerät, schließen Sie keine Kabel an oder ab.

9. Anschließen/Trennen von InfiniBand-Kupferkabel

InfiniBand-Kupferkabel sind schwer und nicht flexible. Deshalb müssen sie vorsichtig an die Anschlüsse angebracht bzw. davon getrennt werden. Lesen Sie die speziellen Warnungen und Anleitungen des Kabelherstellers.

10. Rack-Montage und Wartung

Wenn dieses Produkt in einem Rack montiert oder gewartet wird, sind besondere Vorsichtsmaßnahmen zu ergreifen, um die Stabilität des Systems zu gewährleisten. Im Allgemeinen sollten Sie das Gestell von unten nach oben mit Geräten füllen.

11. Geräteinstallation

Diese Gerät sollte nur von geschultem und qualifiziertem Personal installiert, ausgetauscht oder gewartet werden.

12. Geräteentsorgung

Die Entsorgung dieses Geräts sollte unter Beachtung aller nationalen Gesetze Bestimmungen erfolgen.

13. Regionale und nationale elektrische Bestimmungen

Dieses Gerät sollte unter Beachtung der regionalen und nationalen elektrischen Bestimmungen installiert werden.

14. Installationscodes

Dieses Gerät muss entsprechend der aktuellsten Version des National Electrical Code installiert weden. In Nodamerika muss das Gerät gemäß den geltenden Anforderungen des US National Electrical Code und des Canadian Electrical Code installiert werden.

15. UL- und CSA-zertifiziertes Netzkabel

Für Nordamerika Stromanschluss, wählen Sie ein Netzkabel, das UL-und CSA Certified

3 - Leiter, [18 AWG], mit einem angespritztem Stecker bewertet bei 125 V, [15], mit einer Mindestlänge von 1,5 m [Six Feet] aber nicht mehr als 4,5 m.

Für die europäischen Zusammenhang, wählen Sie ein Netzkabel, das international harmonisiert und der Aufschrift "<HAR>",

3 - Leiter, mindestens 0,75 mm2 Draht, bewertet mit 300 V, mit einem PVC-Mantel isoliert. Das Kabel muss eine angespritztem Stecker bewertet bei 250 V, 10 A. "

16. Hoher Ableitstrom

WARNUNG: Hohe Ableitstrom; Earth Verbindung, bevor Sie die Verbindung von wesentlicher Bedeutung werden.

17. Installationscodes

Dieses Gerät muss installiert sein, entsprechend auf die neueste Version des Landes National Electrical Code. Für Nordamerika, müssen in Übereinstimmung mit den geltenden Vorschriften in der US-amerikanischen National Electrical Code und dem Canadian Electrical Code.

18. Verbindung der Geräte untereinander

Kabel für den Anschluss an das Gerät RS232-und Ethernet-Schnittstellen müssen UL zertifiziert Typ DP-1 oder DP-2. (Hinweis-, wenn nicht mit Wohnsitz in LPS-Schaltung)

Überstromschutz: Eine leicht zugängliche Auflistung Abzweigleitung Überstrom-Schutzeinrichtung 20 A bewertet werden müssen in dem Gebäude Verkabelung.

19. Switch nicht als Regal oder Arbeitsplatz nutzen

Achtung: Auf Schieber/Schienen montiertes Gerät ist nicht als Regal oder Arbeitsbereich zu nutzen. Die Schienen sind nicht dafür bestimmt, die Einheit aus dem Gestell weg zu ziehen. Sie sind nur für die permanente Installation an einem endgültigen Standort gedacht, nicht für Instandhaltung und Wartung.

20. WEEE-Direktive

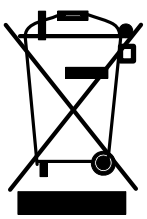

Gemäß WEEE Directive 2002/96/EC müssen alle elektrischen und elektronischen Abfallgeräte (EEE) separat gesammelt und nichit mit normalem Haushaltsmüll ensorgt werden.

Dieses Produkt und alle seine Teile in verantwortungsvoller und umweltfreundlicher Art und Weise entsorgen.

E.7 Advertencias de seguridad de instalación (Spanish)

1. Instrucciones de instalación

Antes de conectar el equipo a la fuente de alimentación, leer todas las instrucciones de instalación.

2. Lesión corporal a causa de peso

.Recurra a suficientes personas para levantar este producto sin

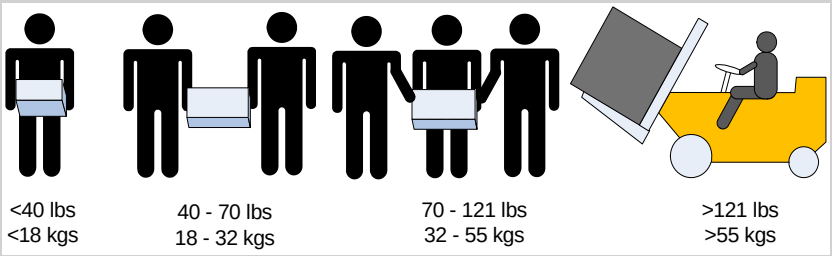

3. Equipos pesados

Dado que el equipo es pesado, se debe mover únicamente mediante un elevador mecánico, para evitar lesiones.

4. Riesgo de descarga eléctrica

¡Riesgo de descarga eléctrica!

Con el módulo del ventilador quitado, se obtiene acceso a las clavijas de alimentación desde dentro de la cavidad del módulo.

NO introducir herramientas ni partes del cuerpo en la cavidad del módulo del ventilador.

5. Sobretemperatura

No se debe utilizar el equipo en un área con una temperatura ambiente superior a la máxima recomendada: 45°C. Además, para garantizar una circulación de aire adecuada, se debe dejar como mínimo un espacio de 8 cm (3 pulgadas) alrededor de las aberturas de ventilación.

6. Apilamiento del chasis

Los chasis no se deben apilar sobre otros equipos. La caída del chasis podría causar lesiones corporales, así como daños al equipo.

7. Conexión redundante de fuente de alimentación: peligro de descarga

Este producto incluye una fuente de alimentación redundante o, en su lugar, una vacía. Si se dispone de una fuente de alimentación vacía, no utilizar el producto si su tapa está quitada o no está bien cerrada.

8. Tomas de alimentación múltiples

Riesgo de descarga eléctrica y peligro de corriente.

Todas las fuentes de alimentación son independientes.

Desconecte todas las fuentes de alimentación, para asegurar que no haya corriente alguna dentro de la plataforma de conmutación.

9. Al haber rayos: peligro de descarga

No utilizar el equipo ni conectar o desconectar cables durante períodos de actividad de rayos.

10. Cable de conexión y desconexión InfiniBand de cobre

Dado que los cables de cobre InfiniBand son pesados y no son flexibles, su conexión a los conectores y su desconexión se deben efectuar con mucho cuidado. Para ver advertencias o instrucciones especiales, consultar al fabricante del cable.

11. Montaje y mantenimiento del bastidor

Al instalar o realizar el mantenimiento de este aparato en un bastidor, es preciso adoptar precauciones especiales para garantizar que el sistema se mantenga estable. En general, en un bastidor, los equipos se deben instalar comenzando desde abajo hacia arriba.

12. Instalación del equipo

La instalación, el reemplazo y el mantenimiento de este equipo estarán a cargo únicamente de personal capacitado y competente.

13. Eliminación del equipo

La eliminación definitiva de este equipo se debe efectuar conforme a todas las leyes y reglamentaciones nacionales.

14. Códigos eléctricos locales y nacionales

Este equipo se debe instalar conforme a los códigos eléctricos locales y nacionales.

15. Códigos de instalación

Este dispositivo se debe instalar conforme a la versión más reciente de los códigos eléctricos nacionales del país en cuestión. En América del Norte, el equipo se debe instalar de acuerdo con las disposiciones vigentes del Código Eléctrico Nacional de los EE.UU. y del Código Eléctrico de Canadá.

16. Cable de alimentación homologado por UL y con certificación CSA

En conexiones de América del Norte, seleccionar un cable de alimentación homologado por UL y con certificación CSA de tres conductores, [16 AWG], terminado en un enchufe moldeado con capuchón de 125 voltios nominal, [13 A], con una longitud mínima de 1,5 metros, pero no más de 4,5 metros.

En conexiones europeas, seleccionar un cable de alimentación armonizado internacionalmente y marcado "<HAR>", de tres conductores, hilo de 1,0 mm2 como mínimo, 300 voltios nominal, con cobertura protectora aislante de PVC. El cable debe tener un enchufe moldeado con capuchón de 250 voltios nominal, 10 A.

17. Alta corriente de fuga

ADVERTENCIA: Alta corriente de fuga. Es esencial efectuar la conexión a tierra antes de conectar la alimentación.

18. Códigos de instalación

Este dispositivo se debe instalar conforme a la versión más reciente de los códigos eléctricos nacionales del país en cuestión. En América del Norte, el equipo se debe instalar de acuerdo con las disposiciones vigentes del Código Eléctrico Nacional de los EE.UU. y del Código Eléctrico de Canadá.

19. Interconexión de unidades

Los cables para la conexión con las interfaces RS232 y Ethernet de la unidad deben estar homologados por UL tipo DP-1 o DP-2. (Nota: cuando residen en circuito no de tipo LPS)

Protección contra sobrecargas: Al cableado del edificio se debe incorporar un dispositivo de protección contra sobrecargas de circuito derivado, de fácil acceso, con una corriente nominal de 20 A.

20. No utilizar el conmutador como estante ni como espacio de trabajo

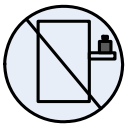

Cuidado: Equipos montados en deslizadores o rieles no se deben utilizar como estantes ni como espacio de trabajo. La finalidad de los rieles no es deslizar la unidad hacia afuera del bastidor. Sirven solo para la instalación permanente en el lugar de destino final, no para fines de servicio o mantenimiento

21. Directiva WEEE

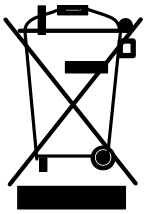

Conforme a la Directiva 2002/96/CE sobre RAEE, todos los residuos de equipos eléctricos y electrónicos (EEE) se deben recolectar por separado y no se deben eliminar junto con residuos domésticos.

Al deshacerse de este producto y de todas sus partes, hágalo de una manera responsable y respetuosa con el medio ambiente.

E.8 Предупреждения по технике безопасности при установке (Russian)

1. Инструкция по установке

Перед подключением оборудования к источнику питания следует ознакомиться с инструкцией по установке.

2. Травмы при переносе тяжелых предметов

Для поднятия этого изделия следует задействовать достаточное количество людей.

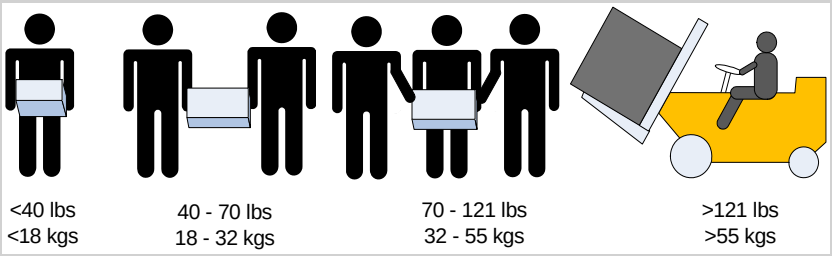

3. Тяжелое оборудование

Это тяжелое оборудование, поэтому его следует перемещать с помощью механического подъемника во избежание травм.

4. Опасность поражения электрическим током

Опасность поражения электрическим током!

Когда снят вентиляторный модуль, существует возможность повреждения контактов питания в его углублении.

НЕ вставлять инструменты или части тела в углубление вентиляторного модуля.

5. Перегрев

Не эксплуатировать это оборудование в помещении с температурой окружающей среды, превышающей максимально рекомендуемое значение: 45 °C (113 °F). Более того, для надлежащей вентиляции следует обеспечить зазор вокруг вентиляционных отверстий не менее 8 см (3 дюйма).

6. Установка шасси поверх другого оборудования

Не устанавливать шасси поверх другого оборудования. Падение шасси может привести к травмам и повреждению оборудования.

7. Опасность поражения электрическим током резервного источника питания

В этом изделии установлен резервный источник питания или модуль-заглушка. Если установлен модуль-заглушка, не эксплуатировать изделие со снятой или ненадежно закрепленной крышкой модуля-заглушки.

8. Несколько источников питания

Опасность поражения электрическим током и опасные энергетические воздействия.

Блоки питания независимы друг от друга.

Чтобы обесточить все компоненты внутри платформы коммутации, следует отсоединить все блоки питания.

9. Опасность поражения электрическим током во время грозы

Во время грозы запрещается использовать оборудование и подключать или отключать кабели.

10. Подсоединение и отсоединение медных кабелей InfiniBand

Медные кабели InfiniBand тяжелые и негибкие, поэтому следует осторожно их подсоединять и отсоединять. За особыми предупреждениями и указаниями следует обратиться к производителю кабеля.

11. Установка или обслуживание в стойке

При установке или обслуживании этого изделия в стойке следует обеспечить устойчивость системы. Как правило, стойка заполняется оборудованием снизу вверх.

12. Установка оборудования

Устанавливать, заменять и/или обслуживать это оборудование должен только подготовленный и квалифицированный персонал.

13. Утилизация оборудования

Это оборудование утилизируется в соответствии с национальными законами и постановлениями.

14. Местные и национальные правила установки электрооборудования

Это оборудование устанавливается в соответствии с местными и национальными правилами установки электрооборудования.

15. Правила установки электрооборудования

Это устройство устанавливается в соответствии с последним изданием национальных правил установки электрооборудования. В Северной Америке оборудование устанавливается в соответствии с действующими требованиями Национальных правил эксплуатации и обслуживания электрических установок США и Канады.

16. Шнур питания, включенный в номенклатуру UL и сертифицированный Канадской ассоциацией стандартизации (CSA)

Подключение к электропитанию в Северной Америке выполняется с помощью шнура питания, включенного в номенклатуру UL и сертифицированного Канадской ассоциацией стандартизации (CSA), 3-жильного, [16 AWG], длиной от 1,5 м [6 футов] до 4,5 м, с литой вилкой, рассчитанной на 125 В [13 А].

Подключение к электропитанию в Европе выполняется с помощью гармонизированного шнура питания с маркировкой <HAR>, 3-жильного, с сечением жилы не менее 1,0 мм², рассчитанного на номинальное напряжение 300 В, с ПВХ оболочкой. Шнур должен иметь литую вилку, рассчитанную на 250 В, 10 А.

17. Высокий ток утечки

Осторожно! Высокий ток утечки. Заземлить перед подключением к электропитанию.

18. Подсоединение устройств

Для подключения к разъемам RS232 и Ethernet используются кабели типа DP-1 или DP-2, сертифицированные организацией UL. (Примечание. При подключении к сети без ограниченного источника электропитания)

Максимальная токовая защита. В проводку здания в легкодоступном месте следует включить устройство защиты от перегрузки по току номиналом 20 А.

19. Не использовать коммутатор как полку или рабочую

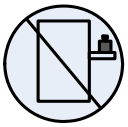

Внимание! Оборудование, установленное на направляющих, не должно использоваться как полка или рабочая поверхность. Направляющие не предназначены для удерживания устройства, выдвинутого из стойки. Они предназначены для стационарной установки только в конечном положении и не используются для обслуживания устройства.

20. Директива WEEE

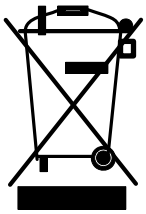

В соответствии с Директивой 2002/96/EC (WEEE) отходы электрического и электронного оборудования должны собираться и утилизироваться отдельно от обычных бытовых отходов.

Следует утилизировать это изделие и все его части ответственным и экологически безопасным способом.

E.9 Avertismente privind siguranţa la instalare (Romanian)

1. Instrucţiuni de instalare

Citiţi toate instrucţiunile de instalare înainte de a conecta

2. Accidentare cauzată de greutate

Apelaţi la un număr suficient de persoane pentru a ridica în siguranţă acest produs.

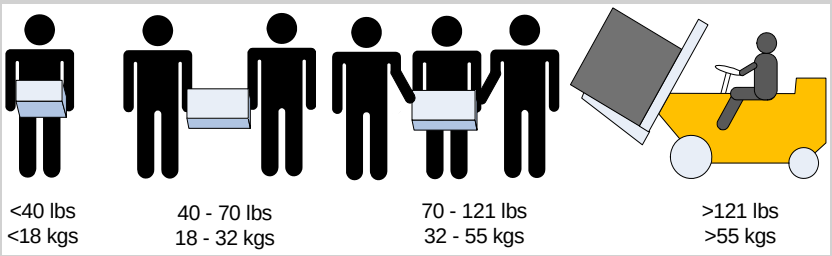

3. Echipament greu

Acest echipament este greu şi trebuie să fie mutat folosind un dispozitiv mecanic de ridicare pentru a evita producerea de leziuni.

4. Risc de şoc electric

Risc de şoc electric!

Odată ce modulul ventilator este îndepărtat, pinii electrici sunt accesibili în cavitatea modulului.

NU introduceţi instrumente sau părţi din corp în cavitatea modulului ventilator.

5. Temperatură în exces

Acest echipament nu trebuie să fie acţionat într-o zonă unde temperatura ambiantă depăşeşte valoarea maximă recomandată: 45°C (113°F). În plus, pentru a asigura un flux de aer adecvat, lăsaţi un spaţiu liber de cel puţin 8 cm (3 inchi) în jurul fantelor de ventilare.

6. Suprapunerea cadrului

Cadrul nu trebuie să fie suprapus peste niciun alt echipament. În cazul în care cadrul cade, poate cauza leziuni corporale şi deteriorări ale echipamentului.

7. Conexiunea la o sursă de alimentare electrică suplimentară - pericol electric

Acest produs include o sursă de alimentare suplimentară sau un spaţiu gol în locul acesteia. În cazul în care spaţiul pentru sursa de alimentare este gol, nu operaţi produsul când capacul orb este îndepărtat sau nu este fixat în mod sigur.

8. Multiple mufe electrice

Risc de şoc electric şi pericol electric.
Toate aparatele cu alimentare de la reţea sunt independente.
Deconectaţi toate sursele de alimentare cu energie pentru a asigura decuplarea în interiorul platformei de comutare.

9. În timpul descărcărilor electrice - pericol electric

În timpul perioadelor cu descărcări electrice luminoase, nu lucraţi cu echipamentul sau nu conectaţi sau deconectaţi cablurile.

10. Conectarea/deconectarea cablului din cupru InfiniBand

Cablurile InfiniBand din cupru sunt grele şi inflexibile, de aceea trebuie să fie ataşate sau detaşate de conectori cu grijă. Consultaţi producătorul de cabluri pentru avertismente/instrucţiuni speciale.

11. Montarea sau depanarea într-un rack

Când acest produs este montat sau depanat într-un rack, trebuie să fie luate măsuri de precauţie speciale pentru a se asigura că sistemul rămâne stabil. În general, trebuie să umpleţi rack-ul cu echipamente începând de jos în sus.

12. Instalarea echipamentului

Acest echipament trebuie să fie instalat, înlocuit şi/sau depanat numai de către personal instruit şi calificat.

13. Eliminarea echipamentului

Eliminarea acestui echipament trebuie să se realizeze în conformitate cu toate legile şi regulamentele naţionale.

14. Codurile electrice locale şi naţionale

Acest echipament trebuie să fie instalat conform codurilor electrice locale şi naţionale.

15. Codurile ed instalare

Acest dispozitiv trebuie să fie instalat în conformitate cu ultima versiune a codurilor electrice naţionale ale ţării în cauză. Pentru America de Nord, echipamentul trebuie să fie instalat conform cerinţelor aplicabile din Codul electric naţional al SUA şi Codul electric canadian.

16. Cordon de alimentare electrică înregistrat UL şi certificat CSA

Pentru conectarea la o sursă de alimentare pentru America de Nord, selectaţi un cordon de alimentare care este înregistrat UL şi certificat CSA, cu 3 conductoare, [16 AWG], terminat cu o fişă turnată, cu putere nominală egală cu 125 V, [13 A], cu o lungime de minimum 1,5 m [şase picioare], dar nu mai lung de 4,5 m.

Pentru conectarea la o sursă de alimentare în Europa, selectaţi un cordon de alimentare care este armonizat la nivel internaţional şi marcat „<HAR>”, cu 3 conductoare, cu minimum 2 fire de 1,0 mm, cu putere nominală egală cu 300 V şi cu o manta izolantă din PVC. Cordonul de alimentare trebuie să fie prevăzut cu o fişă turnată cu putere nominală egală cu 250 V, 10 A.

17. Curent de scurgere de înaltă frecvenţă

Avertisment: Curent de scurgere de înaltă frecvenţă; Împământarea este esenţială înainte de a conecta sursa de alimentare.

18. Interconectarea unităţilor

Cablurile pentru conectarea la unitatea RS232 şi la interfeţele Ethernet trebuie să fie de tipul DP-1 sau DP-2 certificate UL. (Notă- când se regăsesc într-un circuit non-LPS)

Protecţie la supracurent: Un dispozitiv de protecţie la supracurent, înregistrat în circuitul de ramificare, uşor accesibil şi cu o putere nominală egală cu 20 A trebuie să fie integrat în cablajul clădirii.

19. Nu utilizaţi comutatorul ca raft sau spaţiu de lucru

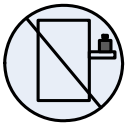

Atenţie: Echipamentul montat pe o linie de alunecare/şină nu va fi utilizat ca raft sau spaţiu de lucru. Scopul şinelor nu este de a glisa unitatea de pe rack. Acestea sunt destinate instalării permanente numai la punctul final de oprire şi nu vor fi folosite pentru depanare şi întreţinere

20. Directiva DEEE

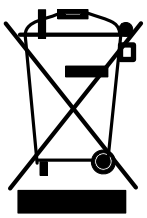

În conformitate cu Directiva DEEE 2002/96/CE, toate deşeurile de echipamente electrice şi electronice (EEE) trebuie colectate separat şi nu trebuie eliminate împreună cu deşeurile menajere obişnuite.

Eliminaţi acest produs şi toate componentele sale în mod responsabil şi ecologic.

E.10 Sigurnosna upozorenja za instaliranje (Croatian)

1. Upute za instaliranje

Pažljivo pročitajte upute za instaliranje prije spajanja opreme na izvor električne energije.

2. Tjelesne ozljede uslijed težine

Kako biste sigurno podignuli ovaj proizvod, koristite dovoljan broj ljudi.

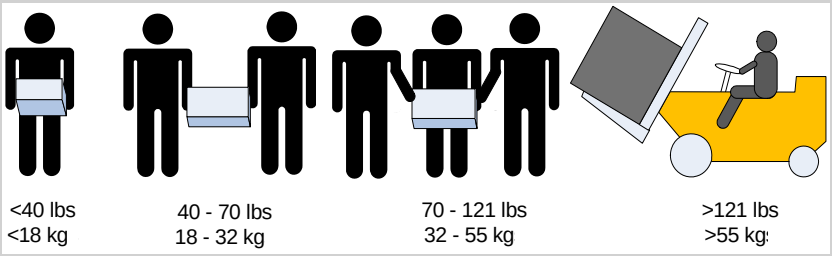

3. Teška oprema

Ova oprema je vrlo teška i treba se premještati pomoću mehaničkog dizala kako bi se izbjegle ozljede.

4. Rizik od strujnog udara!

Rizik od strujnog udara!

S uklonjenim modulom ventilatora, perima napajanja se može pristupiti u otvoru modula.

NEMOJTE umetati alat ili dijelove tijela u otvor modula ventilatora.

5. Pregrijavanje

Ovom se opremom ne bi trebalo rukovati u područjima s temperaturom okoline koja premašuje najviše preporučene vrijednosti: 45°C (113°F). Osim toga, kako bi se osigurao odgovarajući protok zraka, omogućite najmanje 8 cm (3 inča) razmaka oko otvora ventilatora.

6. Slaganje kućišta

Kućište se ne bi trebalo slagati na drugu opremu. Ako kućište padne, može izazvati tjelesne ozljede i oštećenje opreme.

7. Redundantno napajanje - Opasnost od električne energije

Ovaj proizvod uključuje redundantno napajanje ili prazan prostor na njegovu mjestu. U slučaju praznog prostora za napajanje, nemojte rukovati proizvodom ako je poklopac uklonjen ili ako nije dobro pričvršćen.

8. Višestruki ulazi za napajanje

Rizik od strujnog udara i opasnost od električne energije.
PSU jedinice su neovisne.
Odspojite sva napajanja kako biste osigurali stanje bez napajanja unutar platforme preklopnika.

9. Tijekom udara munje - Opasnost od električne energije

Tijekom djelovanja munja, nemojte raditi na opremi ili spajati ili odspajati kabele.

10. Spajanje/Odspajanje bakrenog kabela InfiniBand

Bakreni kabeli InfiniBand su teški i nesavitljivi i kao takvi se moraju pažljivo priključiti na ili isključiti iz konektora. Obratite se proizvođaču kabela za posebna upozorenja/upute.

11. Montaža ormarića i servisiranje

Kad se proizvod montira ili se servisira u ormariću, moraju se poduzeti posebne mjere opreza kako bi se osiguralo da sustav ostane stabilan. Općenito, trebali biste ispunjavati ormarić s opremom počevši od dna prema vrhu.

12. Instaliranje opreme

Ovu bi opremu trebalo instalirati, zamjenjivati i/ili servisirati samo obučeno i kvalificirano osoblje.

13. Odlaganje opreme

Odlaganje opreme trebalo bi se vršiti sukladno nacionalnim zakonima i propisima.

14. Lokalni i nacionalni električni kodovi

Ova oprema trebala bi se instalirati u skladu s lokalnim i nacionalnim električnim kodovima.

15. Instalacijski kodovi

Ovaj se uređaj mora instalirati sukladno najnovijoj verziji nacionalnih električnih kodova države. U Sjevernoj Americi oprema se mora instalirati sukladno važećim zahtjevima navedenim u US National Electrical Code i Canadian Electrical Code.

16. UL CSA kabel napajanja

Za sjevernoameričku mrežu odaberite kabel napajanja koji je na UL listi i sa CSA certifikatom, 3 - žilni, [16 AWG] (16 AWG) koji završava lijevanim utikačem nazivnog napona od 125 V, [13 A], minimalne duljine od 1,5 m [six feet] (šest stopa), ali ne dulji od 4,5 m.

Za europsku mrežu odaberite kabel napajanja koji je međunarodno usklađen i označen "<HAR>", 3 - žilni, s najmanje 1,0 mm^2 žice, nazivnog napona od 300 V, s PVC izolacijom. Kabel mora imati lijevani utikač nazivnog napona od 250 V, nazivne struje od 10 A.

17. Veliko curenje struje

Upozorenje: Veliko curenje struje; Prije spajanja napajanja nužno je spojiti uzemljenje.

18. Interkonekcija uređaja

Kabeli za spajanje na jedinicu RS232 i Ethernet sučelja moraju biti s UL certifikatom vrste DP-1 ili DP-2. (Napomena - kad se nalazi u krugu bez LPS vodiča)

Zaštita od strujnog preopterećenja: Uvijek dostupni odobreni zaštitni uređaji od strujnog preopterećenja nazivne struje od 20 A moraju se ugraditi u ožičenje zgrade.

19. Nemojte koristiti preklopnik kao policu ili radnu površinu

Pozor: Oprema montirana na klizače/vodilice ne bi se trebala koristiti kao polica ili radna površina. Vodilice nisu namijenjene za povlačenje uređaja iz ormarića. Služe samo za trajnu instalaciju na konačnom položaju, a ne za servisiranje i održavanje.

20. WEEE direktiva

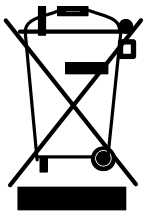

Sukladno WEEE direktivi 2002/96/EZ, sav električni i elektronički otpad (EEE) trebao bi se prikupljati zasebno i ne bi se trebao odlagati kao običan kućanski otpad.
Odlaganje ovog proizvoda i svih njegovih dijelova vršite na odgovoran i ekološki način.

21. Električna ograničenja države Norveške

Ovaj je uređaj namijenjen samo za spajanje na električni sustav s TN uzemljenjem i na električni sustav s IT uzemljenjem države Norveške.

E.11 Avvertenze di sicurezza per l'installazione (italiano)

1. Istruzioni di installazione

Leggere tutte le istruzioni di installazione prima di collegare l'apparecchiatura all'alimentazione.

2. Lesioni a causa del peso

Usare un numero di persone sufficiente per sollevare in sicurezza questo prodotto.

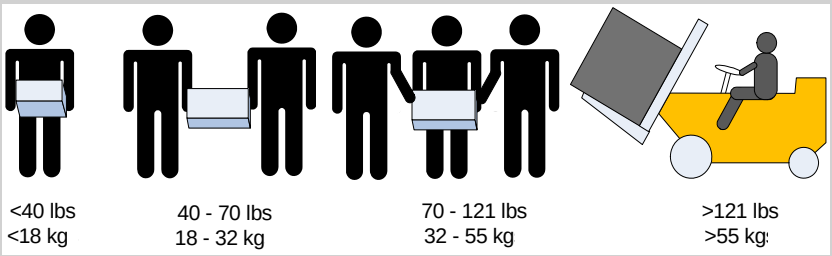

3. Apparecchiatura pesante

Questa apparecchiatura è molto pesante e va spostata mediante un sollevatore meccanico, per evitare lesioni.

4. Rischio di scosse elettriche!

Rischio di scosse elettriche!
Con il modulo ventola rimosso, i pin di alimentazione sono accessibili all'interno della cavità del modulo.
NON inserire strumenti o parti del corpo nella cavità del modulo della ventola.

5. Temperatura eccessiva

Questa apparecchiatura non va utilizzata in un'area con una temperatura ambiente superiore a quella massima consigliata: 45 °C (113 °F). Inoltre, per assicurare un flusso d'aria adeguato, lasciare almeno 8 cm (3 pollici) di spazio attorno alle aperture di ventilazione.

6. Impilare lo chassis

Kućište se ne bi trebalo slagati na drugu opremu. Ako kućište padne, može izazvati tjelesne ozljede i oštećenje opreme.

7. Collegamento di alimentazione ridondante - Pericoli elettrici

Questo prodotto è dotato di un alimentatore ridondante o, qualora esso non sia installato, di uno spazio vuoto. Qualora l'alimentatore non sia installato, non utilizzare il prodotto con il coperchio rimosso o non fissato correttamente.

8. Prese di alimentazione multiple

Rischio e pericolo di scosse elettriche.
Gli alimentatori sono tutti indipendenti.
Scollegare tutti gli alimentatori per assicurarsi che il commutatore non sia sotto tensione

9. Durante i temporali, pericolo di scosse elettriche

Durante i temporali, non effettuare interventi sull'apparecchiatura e non collegare o scollegare i cavi.

10. Collegamento/scollegamento del cavo di rame InfiniBand

I cavi di rame InfiniBand sono pesanti e non flessibili. Di conseguenza, vanno collegati o scollegati con cura dai connettori. Per avvertenze/istruzioni speciali, rivolgersi al produttore di cavi.

11. Montaggio su rack e manutenzione

Quando questo prodotto viene montato o sottoposto a manutenzione su un rack, è necessario adottare delle precauzioni speciali per assicurarsi che il sistema resti stabile. In generale, il rack va riempito con apparecchiature, procedendo dal basso verso l'alto.

12. Installazione dell'apparecchiatura

Questa apparecchiatura va installata, sostituita e/o sottoposta a manutenzione solo da personale addestrato e qualificato.

13. Smaltimento dell'apparecchiatura

Lo smaltimento di questa apparecchiatura va effettuato in conformità con tutte le leggi e le normative nazionali.

14. Codici elettrici locali e nazionali

Questa apparecchiatura va installata in conformità con le norme elettriche locali e nazionali.

15. Codici di installazione

Questo dispositivo va installato in conformità con l'ultima versione dei codici elettrici nazionali del Paese. Per il Nord America, l'apparecchiatura va installata in conformità con i requisiti applicabili del "codice elettrico nazionale USA" e del "codice elettrico canadese".

16. Cavo di alimentazione UL e munito di certificazione CSA

Per una connessione di alimentazione nordamericana, selezionare un cavo di alimentazione di tipo UL e munito di certificazione CSA, a 3 conduttori, [16 AWG], terminato con una spina stampata con tensione nominale pari a 125 V, [13 A], di lunghezza minima pari a 1,5 m [sei piedi] ma non più lunga di 4,5 m.
Per una connessione europea, selezionare un cavo di alimentazione armonizzato a livello internazionale e contrassegnato da "<HAR>", a 3 conduttori, minimo 1,0 mm2 fili, con guaina isolante in PVC. Il cavo deve disporre di una spina stampata di potenza nominale pari a 250 V, 10 A.

17. Corrente di dispersione elevata

Avvertenza: corrente di dispersione elevata; il collegamento a terra è essenziale prima di collegare l'alimentazione.

18. Interconnessione delle unità

I cavi per il collegamento all'unità RS232 e alle interfacce Ethernet devono disporre della certificazione UL ed essere del tipo DP-1 o DP-2. (Nota: in caso di installazione su un circuito la cui potenza non è limitata)
Protezione contro le sovracorrenti: la cablatura dell'edificio deve integrare un dispositivo di protezione contro le sovracorrenti di potenza nominale pari a 20.

19. Non utilizzare lo switch come scaffale o piano di lavorol

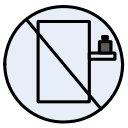

Attenzione: un'apparecchiatura scorrevole o montata su binari non va utilizzata come scaffale o piano di lavoro. I binari non sono progettati per far scorrere e allontanare l'unità dal rack. Essi sono destinati all'installazione permanente solo nel luogo di lavoro e non vengono utilizzati per assistenza e manutenzione

20. Direttiva RAEE

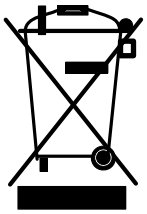

Secondo la direttiva RAEE 2002/96/EC, tutti i rifiuti da apparecchiature elettriche ed elettroniche (RAEE) vanno raccolti separatamente e non smaltiti nei normali rifiuti domestici.
Smaltire questo prodotto e tutte le sue parti in modo responsabile e rispettoso dell'ambiente

21. Limitazioni relative all'alimentazione per la Norvegia

Questa apparecchiatura è progettata esclusivamente per il collegamento a un sistema di alimentazione TN e a un sistema di alimentazione IT.

E.12 Montaj Güvenlik Uyarıları (Türkçe)

1. Montaj Talimatları

Ekipmanı güç kaynağına bağlamadan önce tüm montaj talimatlarını okuyun.

2. Ağırlık Nedeniyle Fiziksel Yaralanma

Bu ürünü güvenli bir şekilde kaldırabilmek için yeterli sayıda insandan yardım alın.

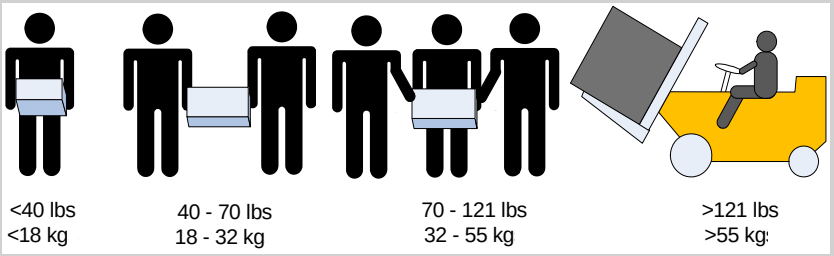

3. Ağır Ekipman

Bu ekipman çok ağırdır ve yaralanmaları önlemek için ekipmanın mekanik asansör kullanılarak taşınması gerekir.

4. Elektrik Çarpması Riski!

Bu ekipman, önerilen maksimum ortam sıcaklığını aşan alanlarda çalıştırılmamalıdır: 45 °C (113 °F). Ayrıca, düzgün hava akışı sağlamak için havalandırma deliklerinin etrafında en az 8 cm (3 inç) açıklık bırakılmalıdır.

5. Aşırı ısınma

Bu ekipman, önerilen maksimum ortam sıcaklığını aşan alanlarda çalıştırılmamalıdır: 45 °C (113 °F). Ayrıca, düzgün hava akışı sağlamak için havalandırma deliklerinin etrafında en az 8 cm (3 inç) açıklık bırakılmalıdır.

6. Şasi İstif

Şasinin diğer herhangi bir ekipmanın üzerine istiflenmemesi gerekir. Şasi düşerse, fiziksel yaralanmalara ve ekipmanda hasara neden olabilir.

7. Yedekli Güç Kaynaðý Baðlantýsý -Elektrik Çarpma Tehlikesi

Bu ürün, yedekli güç kaynağı veya onun yerine boş elektrik kutusu içerir. Güç kaynağı için boş elektrik kutusu varsa, kutunun kapağı açıkken veya tam olarak kapatılmamışken ürünü çalıştırmayın.

8. Çoklu Güç Girişleri

Elektrik çarpması riski ve enerji tehlikesi.
Bütün PSU'lar (Güç Kaynağı Üniteleri) ayrıdır.
Anahtar platformundaki gücü kapatmak için tüm güç kaynaklarının bağlantılarını kesin.

9. Şimşek - Elektrik Çarpma Tehlikesi

Gökyüzünde şimşek çaktığı zamanlarda, ekipman üzerinde çalışmayın veya kablo bağlamayın ya da kablo bağlantısı kesmeyin.

10. Bakır İnfiniband Kablo Bağlama/Bağlantıyı Kesme

Bakır İnfiniband kablolar ağırdır ve esnemezler. Bu nedenle, bağlantılara çok dikkatli bir şekilde takılmaları veya çıkarılmaları gerekir. Özel uyarılar/talimatlar için kablo üreticinize başvurun.

11. İskele Montajı ve Bakım

Bu ürün bir iskelede monte edildiyse veya bir iskele ile sunulduysa, sistemin sabit kalması için özel önlemler alınmalıdır. Genelde, ekipmanları iskeleye aşağıdan yukarı doğru doldurmanız gerekir.

12. Ekipman Montajı

Ekipmanın yalnızca eğitimli ve nitelikli personel tarafından monte edilmesi, değiştirilmesi ve/veya bakımının yapılması gerekir.

13. Ekipmanın Atılması

Bu ekipmanın imhasında tüm ulusal yasalara ve düzenlemelere uyulması gerekir.

14. Yerel ve Ulusal Elektrik Kodları

Bu ekipmanın montajında yerel ve ulusal elektrik kodlarına uyulması gerekir.

15. Montaj Kodları

Bu cihazın, ülke ulusal elektrik kodlarının son sürümüne göre monte edilmesi gerekir. Kuzey Amerika için, ekipmanın ABD Ulusal Elektrik Kodu ve Kanada Elektrik Kodu'nun uygulama koşullarına göre monte edilmesi gerekir.

16. UL Kayıtlı ve CSA Onaylı Güç Kaynağı Kablosu

Kuzey Amerika'da güç bağlantısı için, UL Kayıtlı ve CSA Onaylı bir güç kaynağı kablosu seçin, 3 - iletken, [16 AWG], 125 V değerinde, kalıplanmış bir fişle biten, [13 A], en az 1,5 m (altı fit) uzunluğunda fakat 4,5 m'den uzun olmayan bir kablo. Avrupa'da güç bağlantısı için, uluslararası uyumlu ve “<HAR>” işaretli, 3 - iletken, en az 1,0 mm2 tel, 300 V değerinde ve PVC yalıtımlı bir güç kaynağı kablosu seçin. Kablonun 250 V, 10 A değerinde bir kalıplanmış fişi olması gerekmektedir.

17. Yüksek Kaçak Akım

Uyarý: Yüksek kaçak akım varsa; güç kaynağına bağlanmadan önce mutlaka toprak-lama bağlantısı yapılmalıdır.

18. Ünitelerin Ara Bağlantısı

RS232 ünitesini ve Ethernet Arabirimlerini bağlayacak olan kabloların UL onaylı DP-1 veya DP-2 tipi olması gerekir. (Not- LPS olmayan devreye aitse) Aşırı Akım Koruması: Kolayca erişilebilecek 20 V Kayıtlı devre parçası aşırı akım koruma cihazının bina elektrik şebekesinde kurulu olması gerekir.

19. Anahtarı Raf veya Çalışma Alanı olarak kullanmayınl

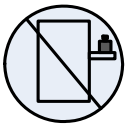

Dikkat: Sürgülü/raylı ekipman raf veya çalışma alanı olarak kullanılamaz. Raylar üniteyi iskeleden uzağa kaydırmak için yapılmamıştır. Sadece, ekipmanın son olarak duracağı yerdeki kalıcı montaj içindir, servis veya bakım için kullanılamaz.

20. WEEE Yönergesi

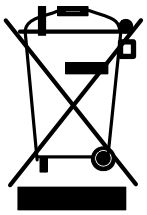

WEEE Yönergesi 2002/96/EC uyarınca, tüm elektrikli ve elektronik ekipman atıkları (EEE) ayrı olarak toplanmalı ve evsel atıklarla birlikte çöpe atılmamalıdır.
Bu ürün ve tüm parçaları çevreye dost ve sorumlu bir şekilde imha edilmelidir.

21. Norveç Güç Kısıtlamaları

Bu ünite, bir TN güç sistemine ve sadece Norveç'in IT güç sistemine bağlanmak içindir.

22. Japan VCCI Statement

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A